



2018

YEKALON MOSAIC



WHO WE ARE

Founded in 1997, Yekalon **Sennorwell** ceramics are manufactured with the latest technique and using the best materials. They express the ultimate in design elegance and perfect for entry ways, accent walls and special applications where the touch of elegance is desired.

We offer comprehensive product lines including Polished porcelain tile, Rustic tile, Wall tile, (including Coordinating wall & floor tile) Mosaic. Etc. With a wide selection of colours, patterns and finishes as well as an extensive line of coordinating accessories.

The annual manufacturing capacity of approximate 150 million square feet makes us maximize production at its lowest cost. With the aim of lowering costs and continually developing new products, we never stop the pace of improvement and innovation and continue to invest in manufacturing technology.

We also open for OEM orders.

We look forward to the establishing of co-operation with you!

What WE CAN DO FOR YOU

Cost Control

Goods is shipped directly from the quarry, Various solutions meet your project budget.

Quality Control

Excellent factory management, Advanced equipment, Professional QC team.

Guaranteed delivery

Abundant stock, Perfect production lines, Mighty logistic team.

Measurement

Auto CAD drawings measurement Jobsite measurement.

Design

Professional design team supply you Architecture design, Landscaping design, Interior & Exterior Design and Product Design.

Technical Support

Job-site installation instruction and guide.

Index



Ceramic Mosaic Series 01






Crystal Mosaic Series 29




Glass Mosaic Series 48





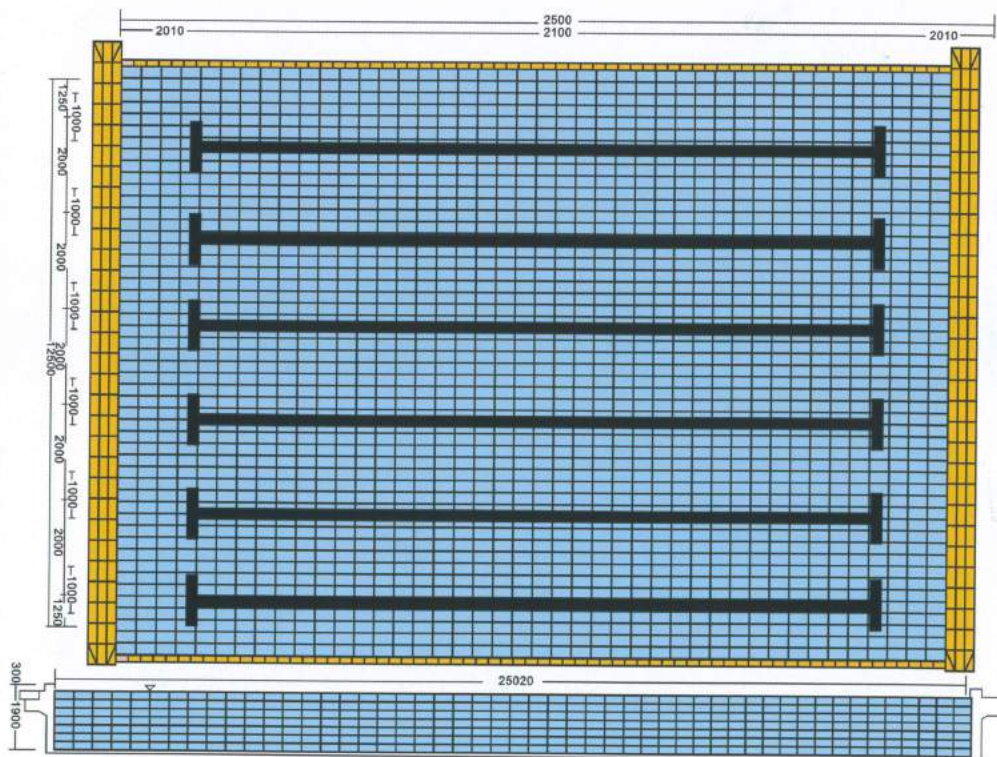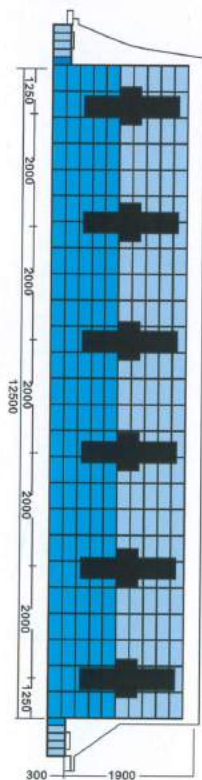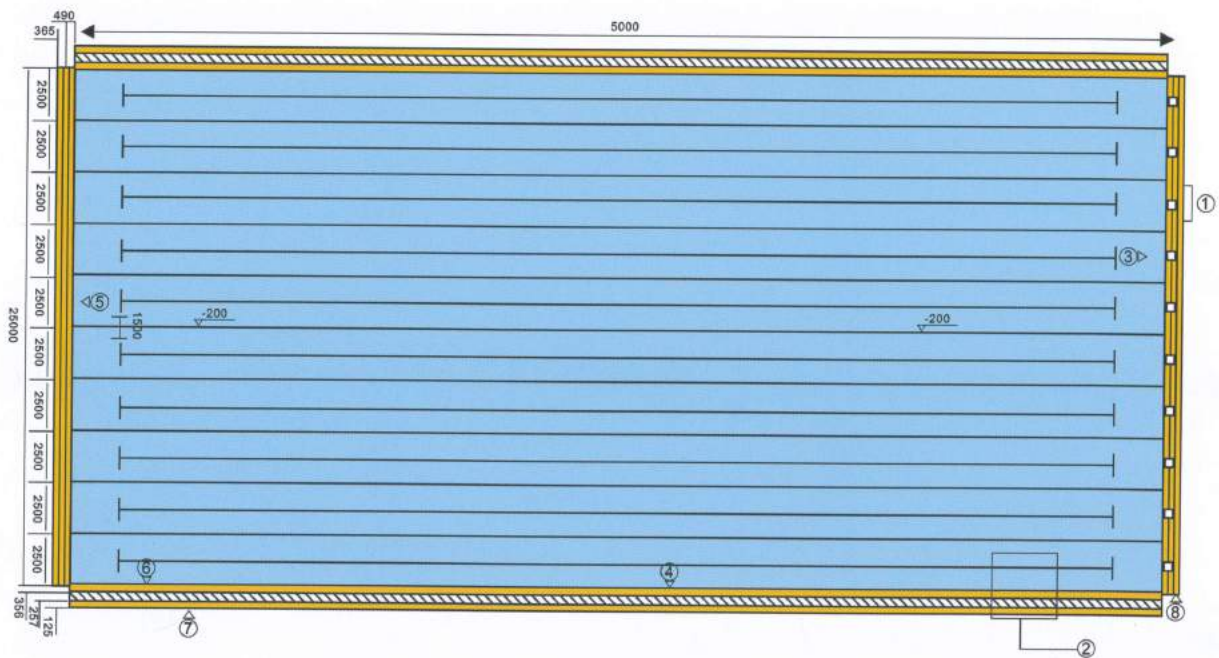

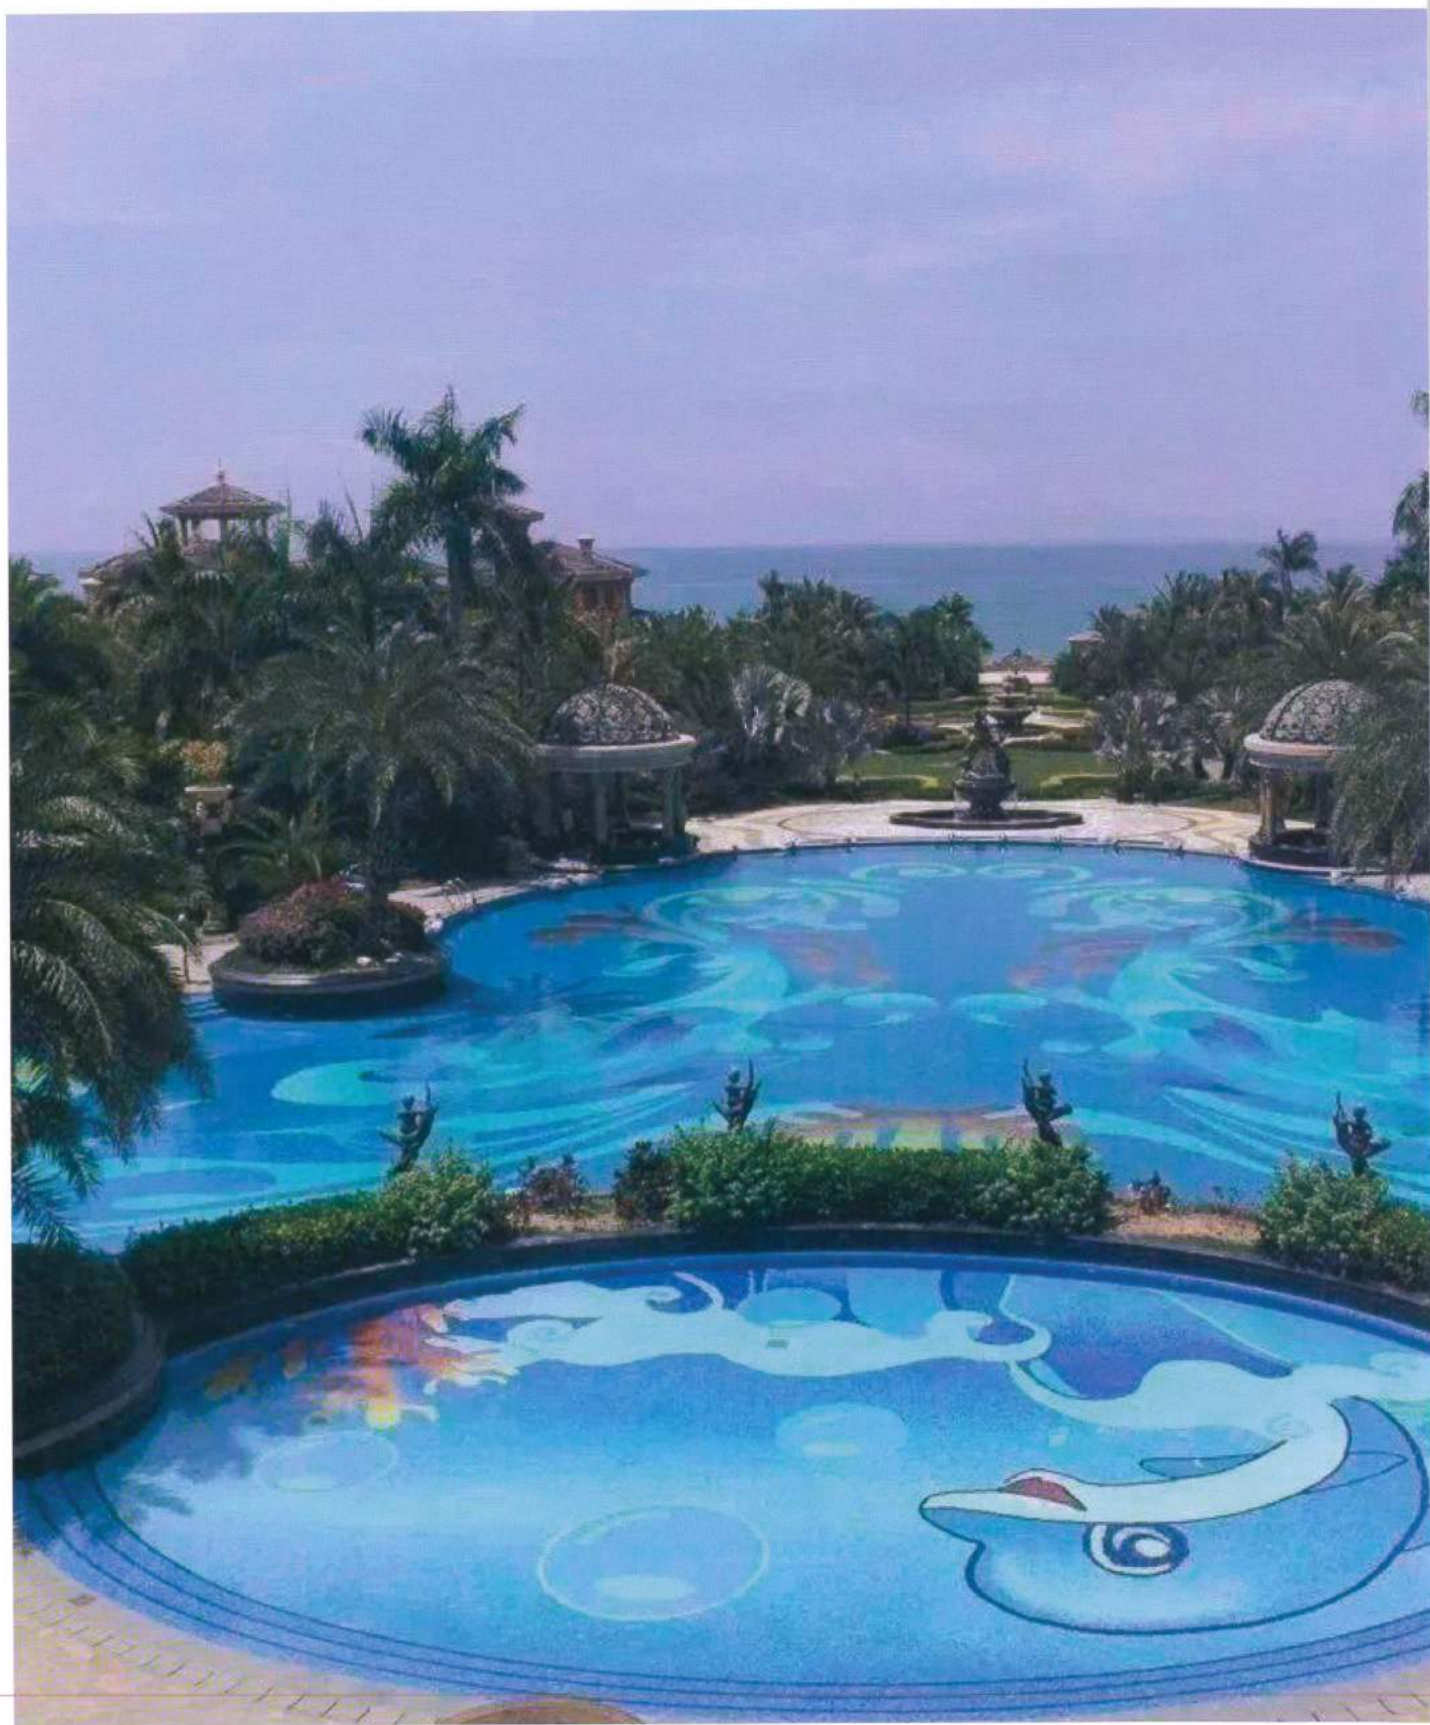



Mosaics Installation

1.CHECKING THE MATERIAL

Before starting work, be careful to check the boxes containing the sheets of YEKALON mosaic and ensure that there is sufficient material to complete the job. Every box indicates the item number, shade number, production batch number, and other details.

2.SKIMMING

This is a step that serves to render the substrate for tiling perfectly smooth, uniform and white (a substrate showing differences in color will spoil the appearance of the finished mosaic).

3.STARTING LINES

Draw lines on the surface of the substrate to aid correct positioning of the sheets. Lay three sheets out the floor side by side, so that the gap between the sheets is the same as the gap between the single tessera, and measure the overall width. Transfer this measurement both horizontally and vertically to the surface being covered and, using a straightedge and a spirit level, mark out a grid; the area will now be divided into a number of squares, each corresponding to nine sheets of mosaic.

4.PREPARING THE ADHESIVE

Prepare the adhesive, and spread over an area no larger than will be occupied by the first nine sheets, using the trowel. First apply a thick coat with the smooth edge of the tool, drawing the teeth across evenly and "combing" the adhesive to produce a uniformly ridged bed. The sheets can now be positioned.

5.LAYING AND FIXING

The sheets are back-mounted to a mesh that should be directly applied to the bed of adhesive. On walls, the thicker strands of mesh should be positioned vertically. Please note: the gap separating adjacent sheets must be the same as the gap between single tessera.

6.A FIRM BOND

With the sheets in place, tap the tessera home with a float so that the mesh beds firmly into the adhesive.

7.A PERFECT END RESULT


With all the sheets laid or fixed, and before the adhesive begins to set, the distance between tessera can be adjusted to ensure that all gaps are of uniform width. This is done by cutting through the mesh along the gap with a knife and edging the adjoining tessera marginally closer together or farther apart with the aid of a trowel. This is a step of the mosaic tiling procedure that calls for patience, but one that also adds considerable value to the finished job.

8.GROUTING


Make sure to use all of the grout. Using the small trowel, scoop the grout a little at a time, onto the float and begin applying to the mosaic. Move the tool diagonally across the tessera, first from the bottom up and then squeegee downwards in the opposite direction, making certain that all of the joints are completely filled and that no excess remains.

9.CLEANING


Before the grout hardens, begin cleaning off the surface. Prepare two buckets of this solution: immerse the pad in the first, and without wringing, swab the surface of the mosaic repeatedly with a circular motion. Next, immerse the sponge in the second clean water to remove any smears, leaving the mosaic sparklingly clean.

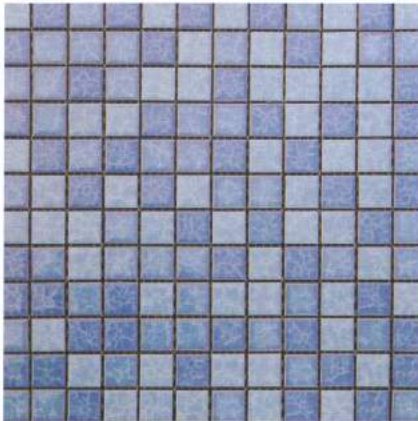


YCB060501

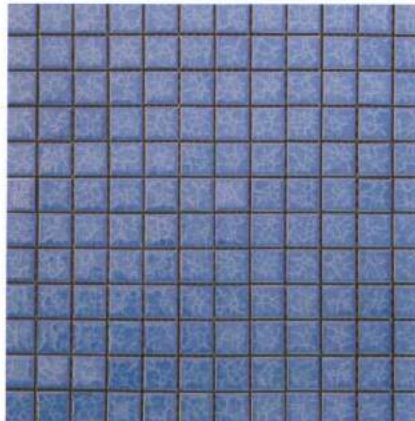

YCB060502

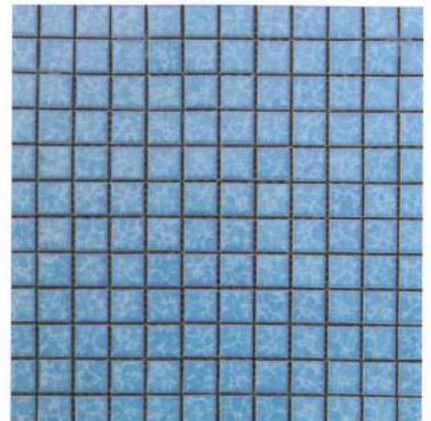


YCB060503

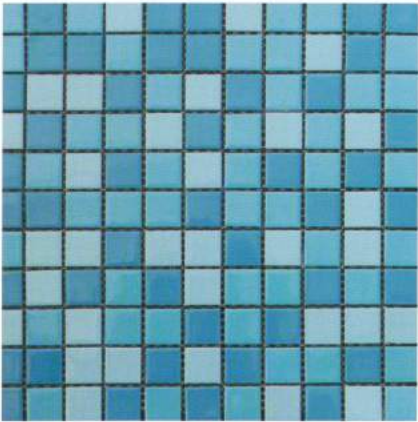


YCB060504




YCB060505

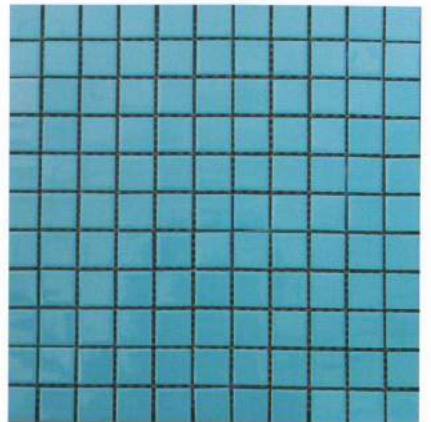


YCB060506

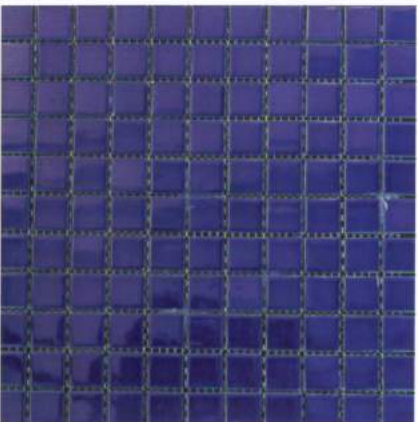


YCB060507

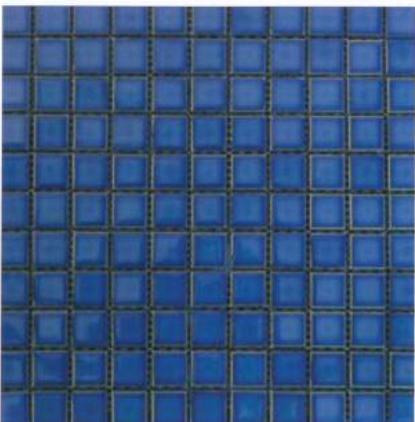


YCB060508

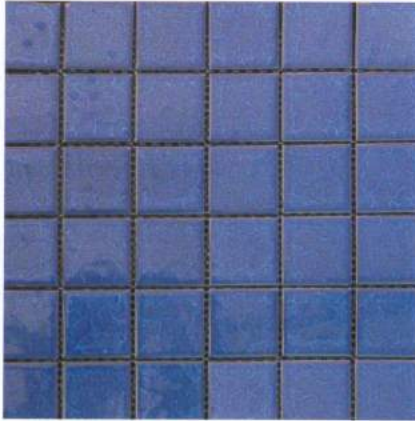


YCB060601

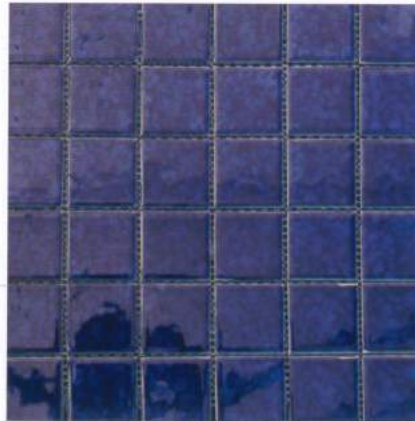


YCB060602

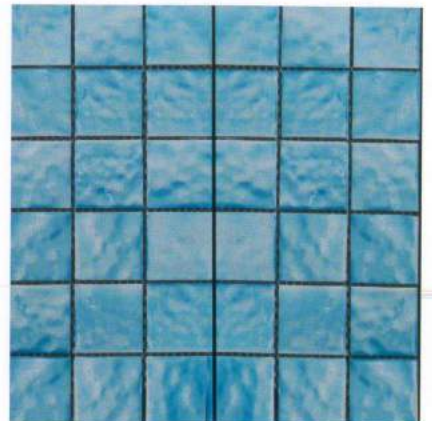

YCB060603

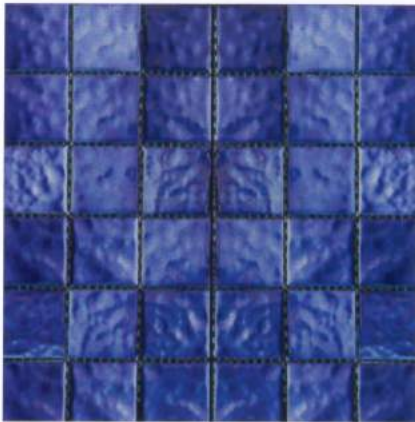


YCB060604

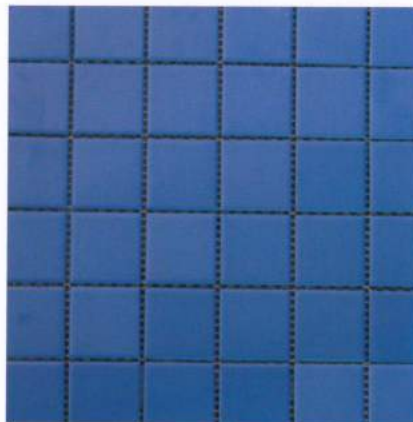


YCB060605




YCB060606

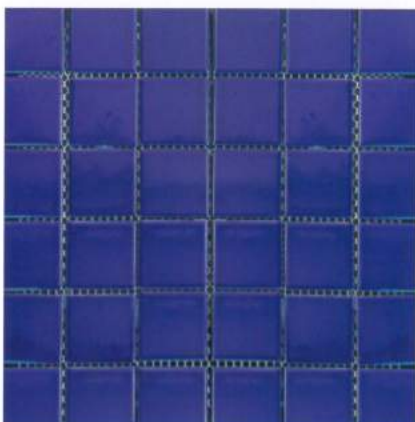


YCB060607

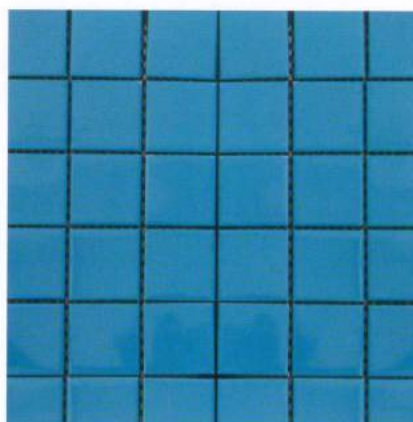


YCB060608

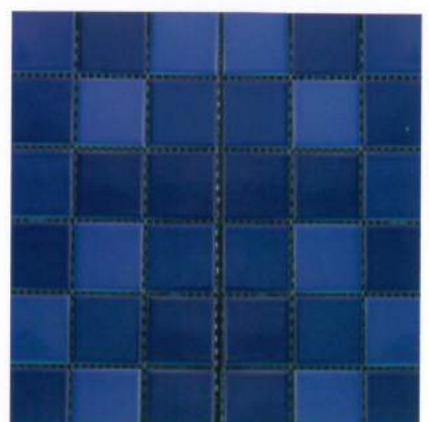

YCB060609

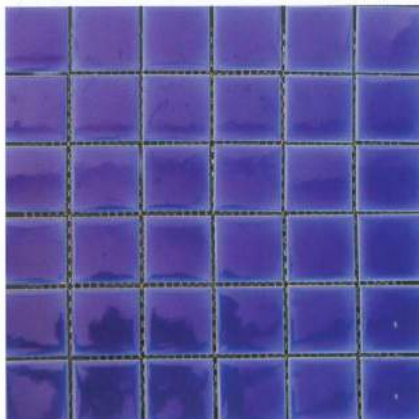


YCB060701

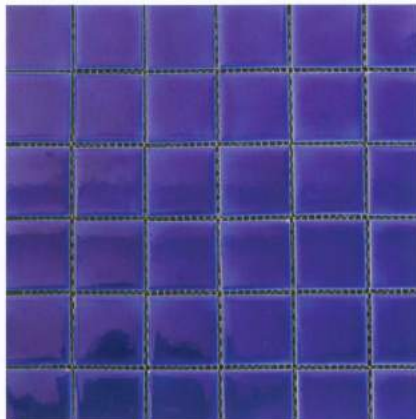

YCB060702



YCB060703

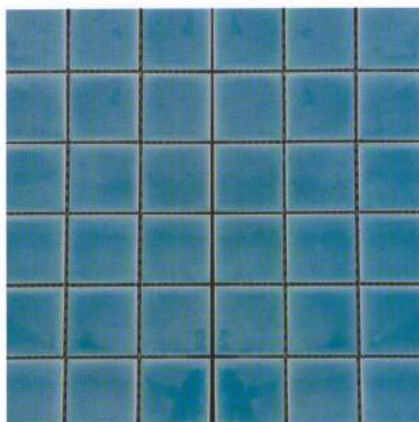


YCB060704




YCB060705




YCB060706

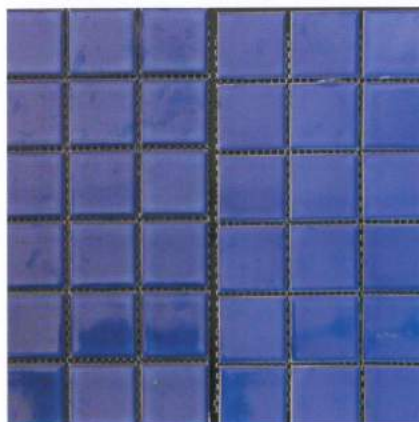


YCB060707

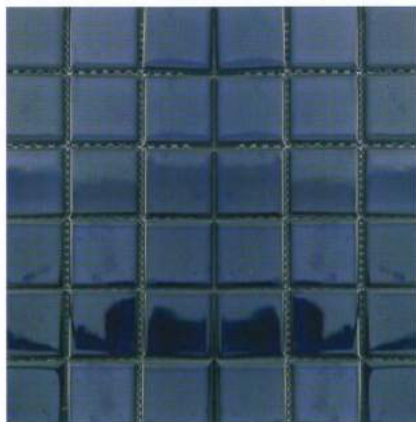


YCB060708

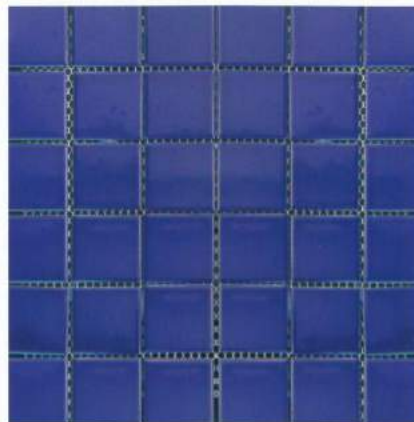

YCB060709

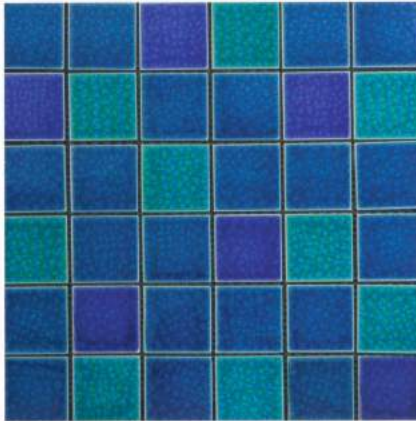


YCB060801

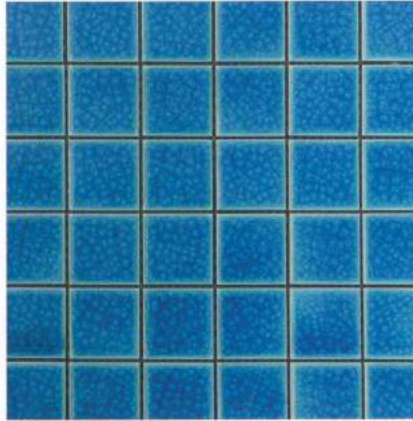

YCB060802



YCB060803

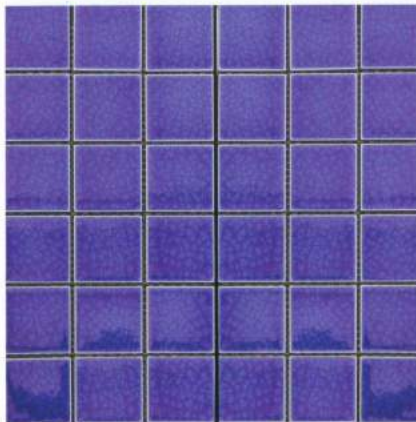


YCB060804



YCB060805




YCB060806

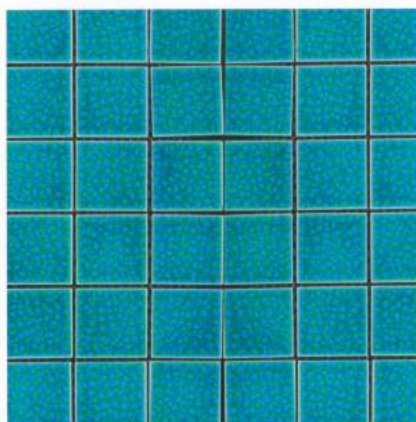


YCB060807




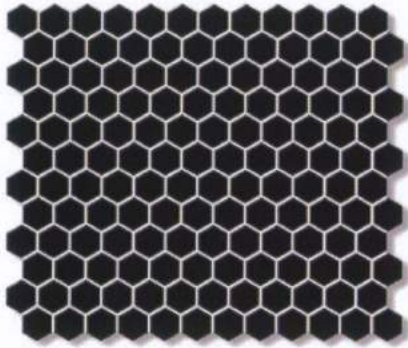


YCB061001

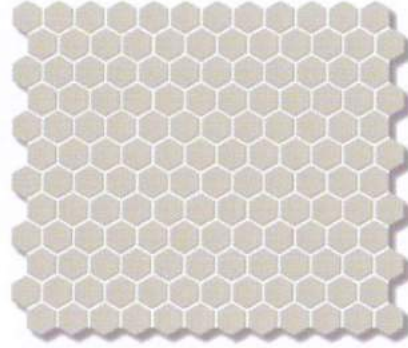

YCB061002

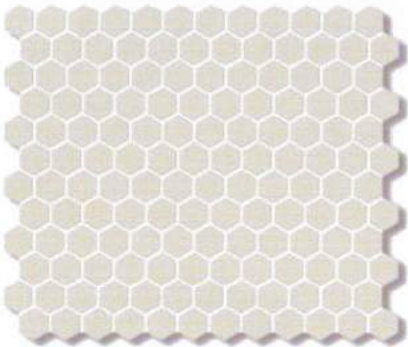

YCB061003

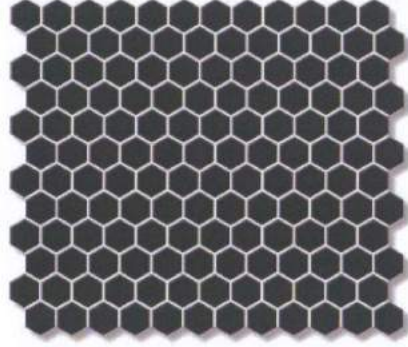

YCB061004

Chip Size(mm)	95x110
Sheet Size(mm)	295.5x256.5
Joint Width(mm)	3.5



YCB061101



YCB061102




YCB061103




YCB061104


Chip Size(mm)	23x26
Sheet Size(mm)	260x300(12x12Lines)
Joint Width(mm)	2

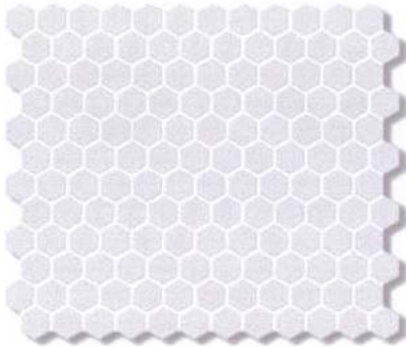


YCB061201

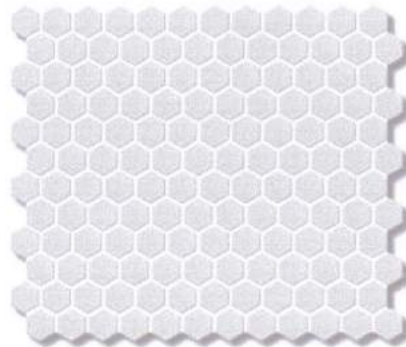

YCB061202

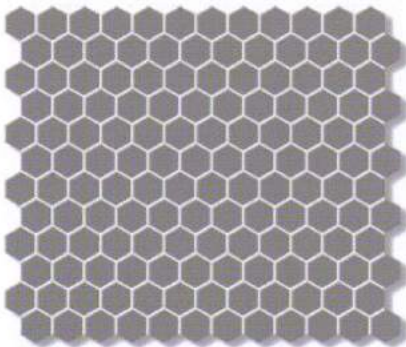


YCB061203

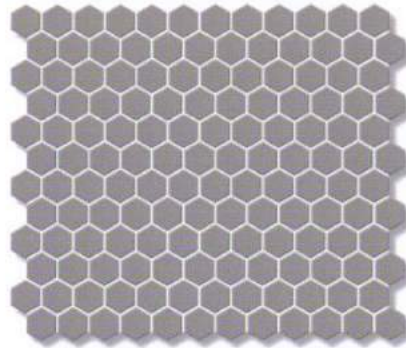


YCB061204


Chip Size(mm)	23x26
Sheet Size(mm)	260x300(12x12Lines)
Joint Width(mm)	2

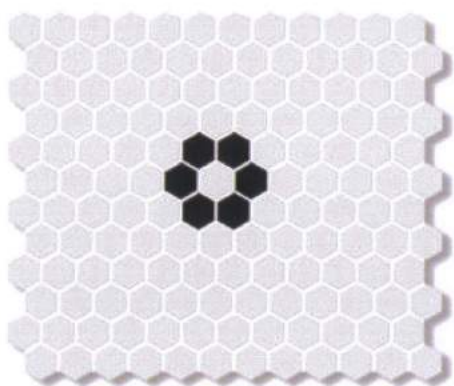


YCB061301

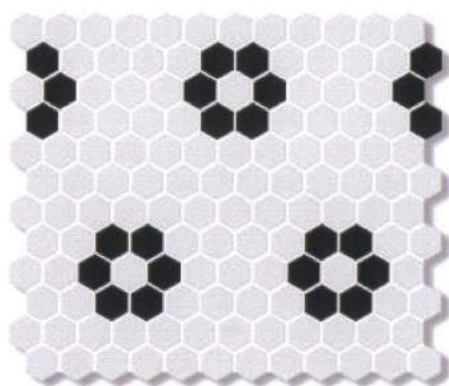


YCB061302

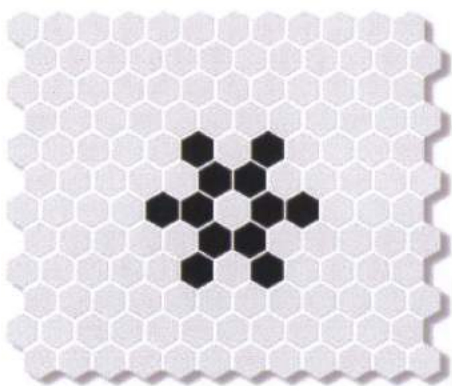

YCB061303

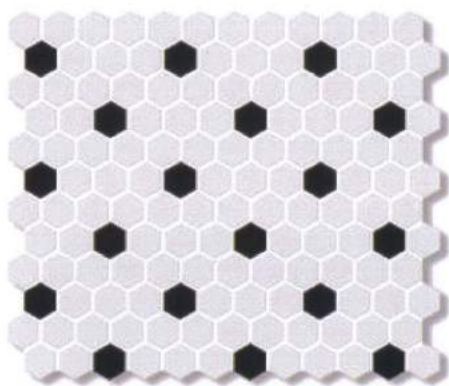


YCB061304

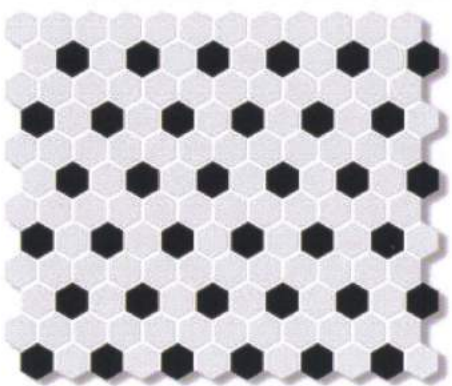


YCB061305




Chip Size(mm)	51x59
Sheet Size(mm)	284x324(6x6Lines)
Joint Width(mm)	3

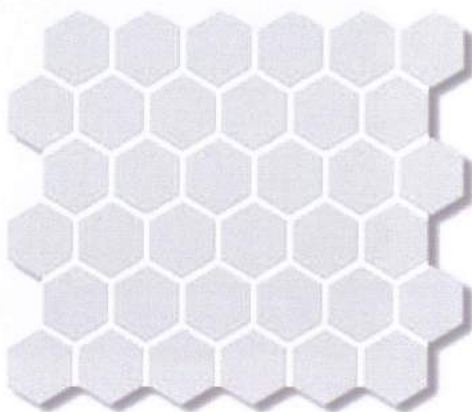


YCB061401

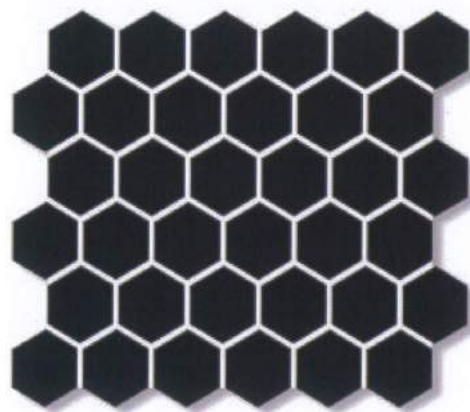


YCB061402

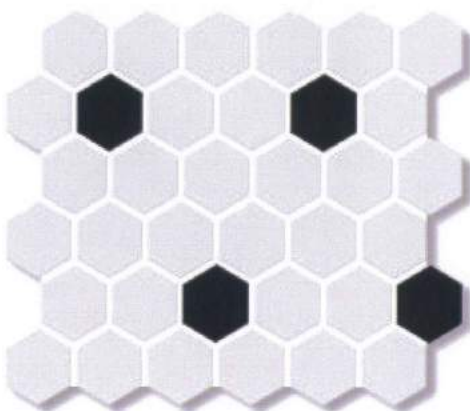

YCB061403

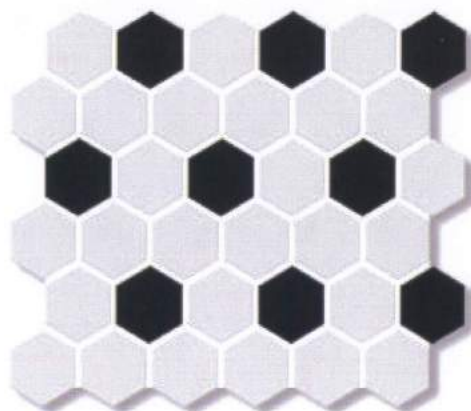


YCB061404

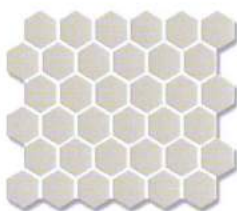

YCB061405



YCB061406

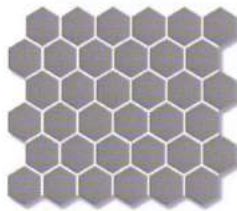


YCB061407




YCB061408


Chip Size(mm)	D19
Sheet Size(mm)	310x315(15x17Lines) 294x315(15x16Lines)
Joint Width(mm)	2

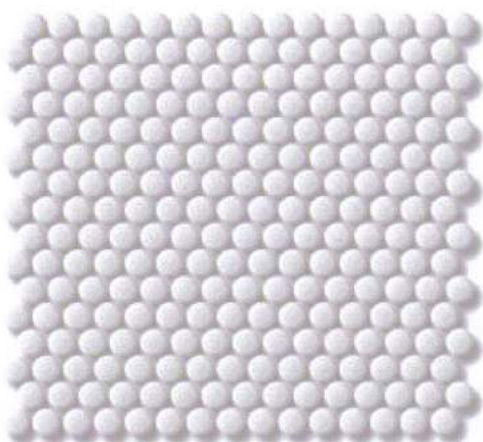


YCB061501

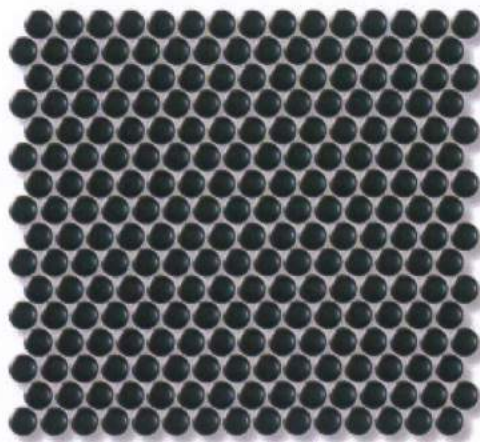


YCB061502

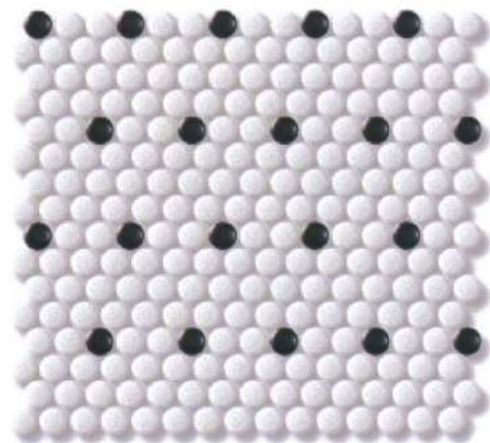


YCB061503

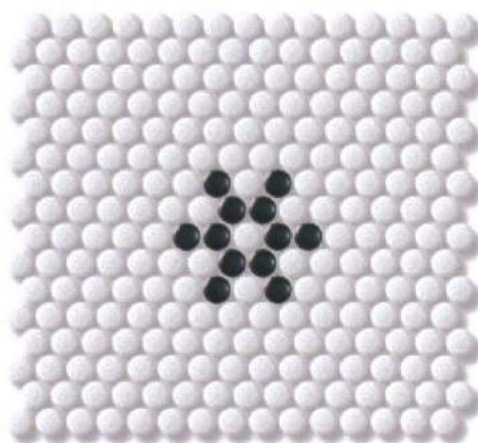

YCB061504

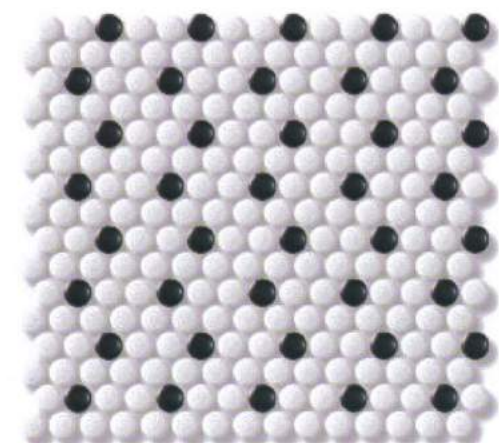


YCB061505

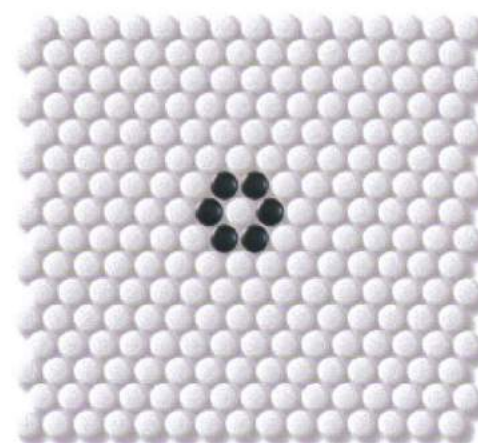

YCB061506

Chip Size(mm)	D19
Sheet Size(mm)	310x315(15x17Lines) 294x315(15x16Lines)
Joint Width(mm)	2

Ceramic Mosaic

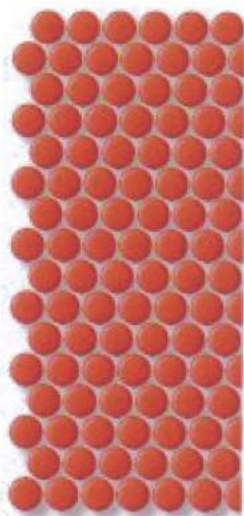


YCB061601



YCB061602




YCB061603

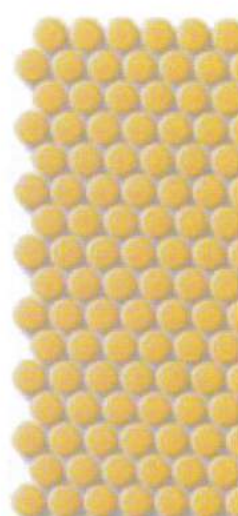


YCB061604




YCB061605

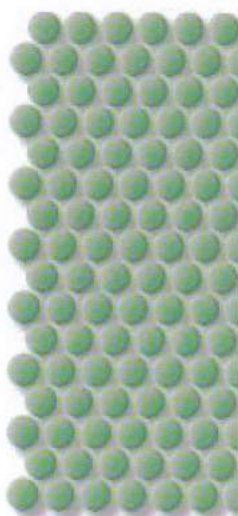

YCB061606

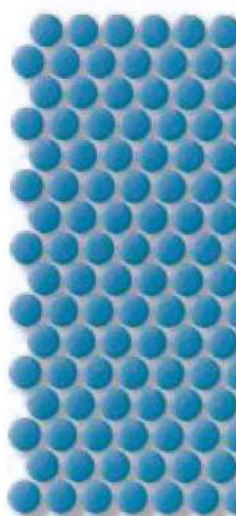


YCB061607

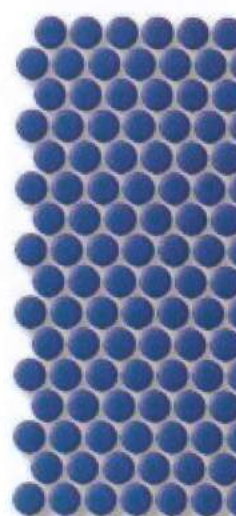


YCB061608


Chip Size(mm)	D19
Sheet Size(mm)	310x315(15x17Lines) 294x315(15x16Lines)
Joint Width(mm)	2

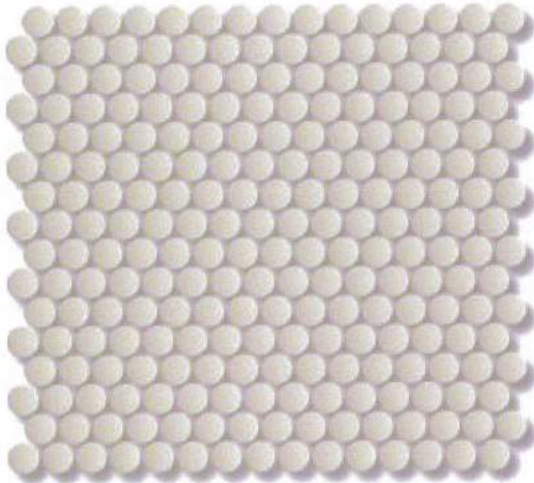


YCB061701

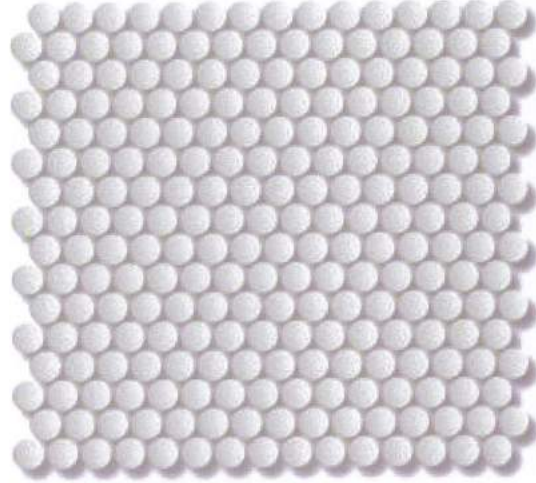

YCB061702

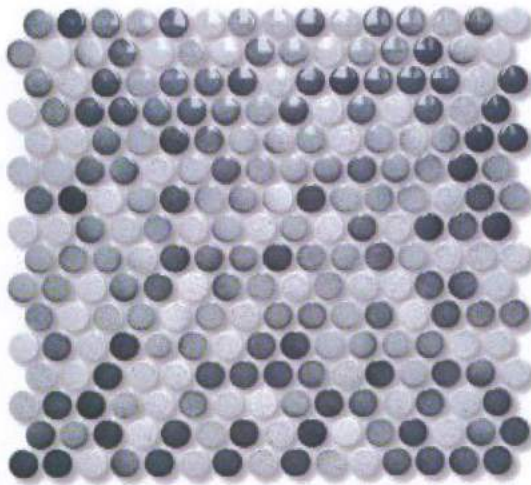

YCB061703

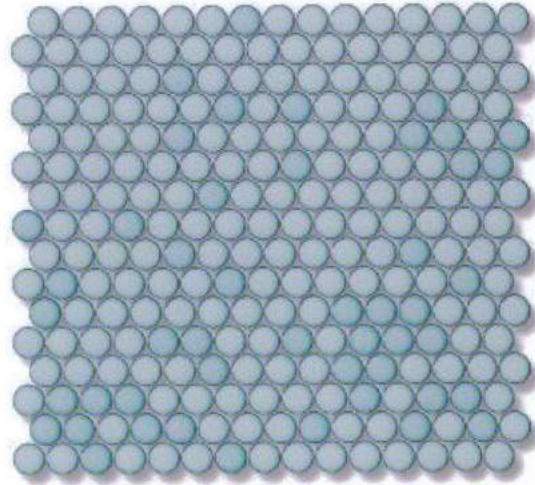


YCB061704


Chip Size(mm)	51x59
Sheet Size(mm)	284x324(6x6Lines)
Joint Width(mm)	2




YCB061801

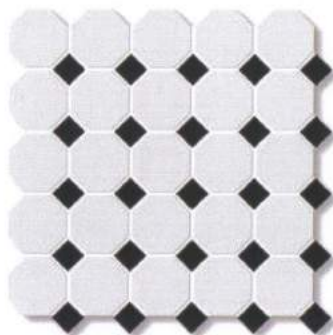

YCB061802

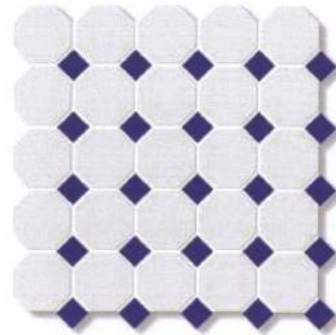

YCB061803

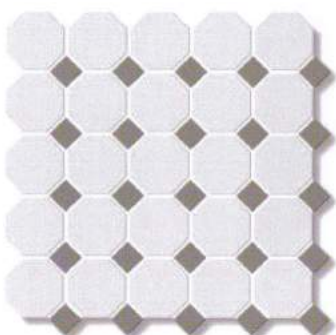

YCB061804



YCB061805



YCB061806



YCB061807




YCB061808


Chip Size(mm)	48x70
Sheet Size(mm)	252x290
Joint Width(mm)	2.5




YCB061901

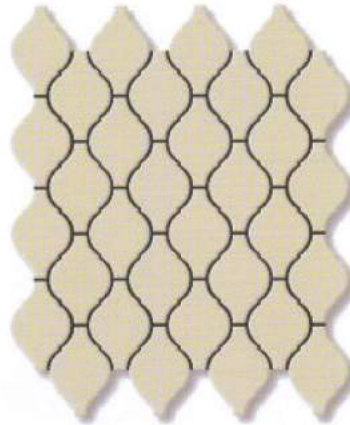

YCB061902

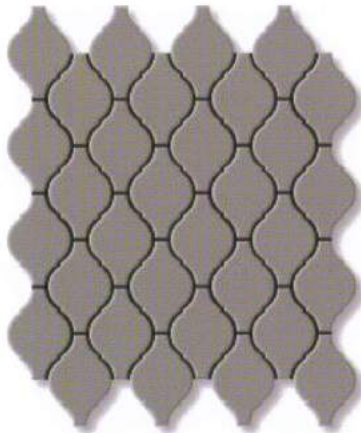

YCB061903

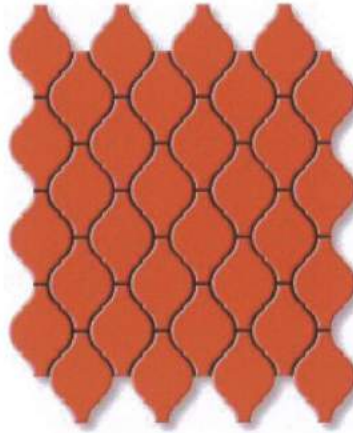

YCB061904



YCB061905




YCB061906

Chip Size(mm)	48x48
Sheet Size(mm)	266x305
Joint Width(mm)	3




YCB062001

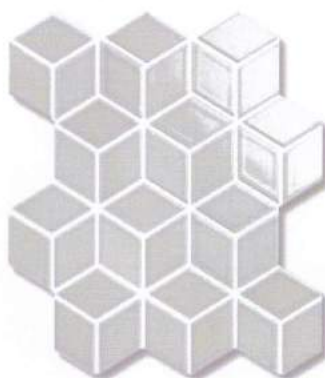

YCB062002




YCB062003

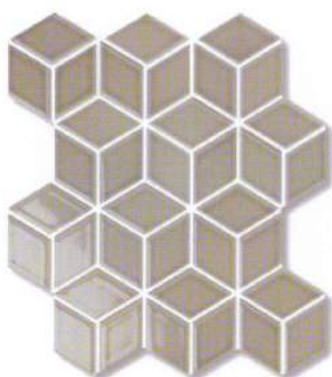

YCB062004



YCB062005

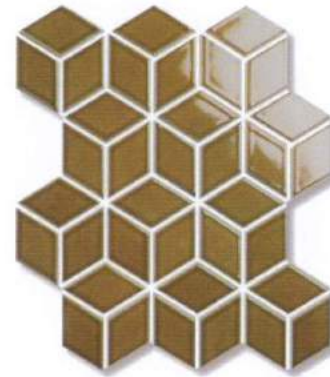

YCB062006




YCB062007




YCB062008


Chip Size(mm)	48x48	23x48
Sheet Size(mm)	306x306	300x300
Joint Width(mm)	3	2

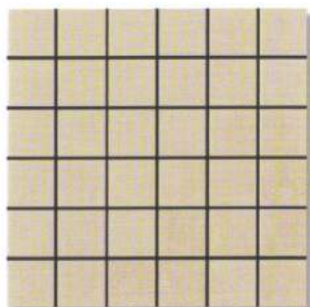

YCB062101

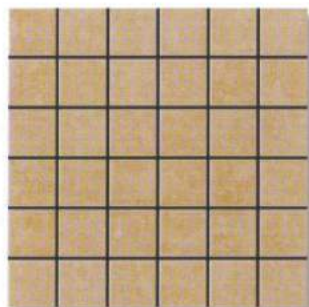


YCB062102

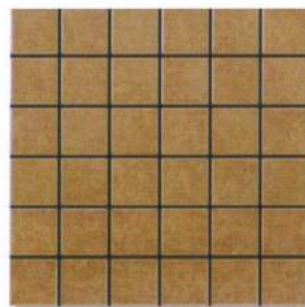

YCB062103



YCB062104

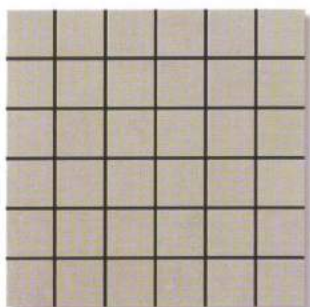

YCB062105




YCB062106




YCB062107



YCB062108

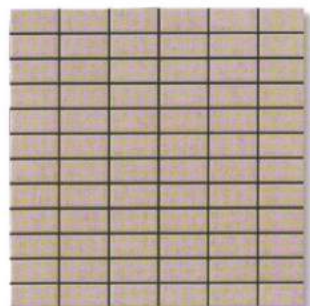


YCB062109

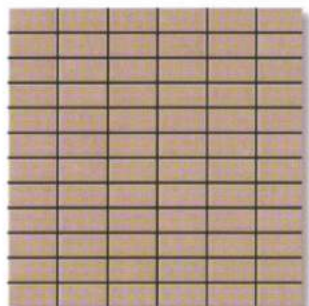

YCB062110




YCB062111

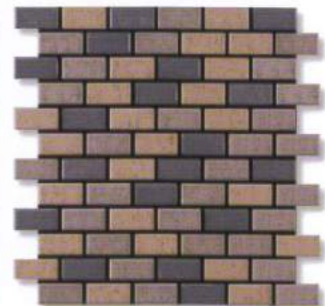


YCB062112


Chip Size(mm)	48x48	23x48
Sheet Size(mm)	306x306	300x300
Joint Width(mm)	3	2

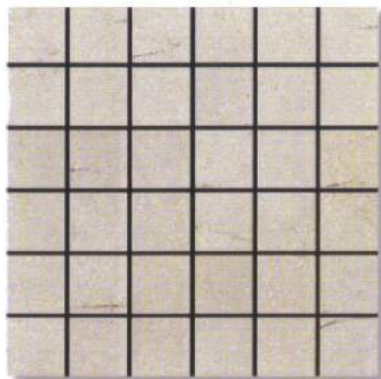


YCB062201

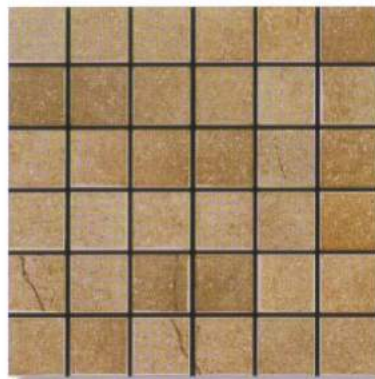

YCB062202

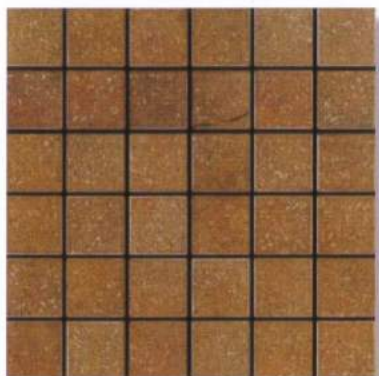


YCB062203

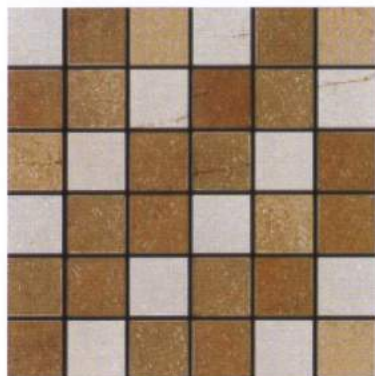


YCB062204



YCB062205

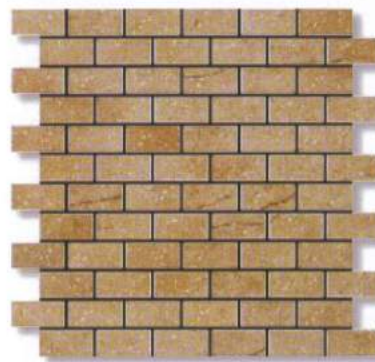

YCB062206

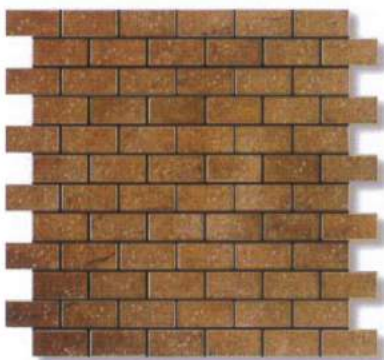

YCB062207




YCB062208


Chip Size(mm)	21.5x71.5	45x95
Sheet Size(mm)	294x298	291x295.5
Joint Width(mm)	3	3.5




YCB062301

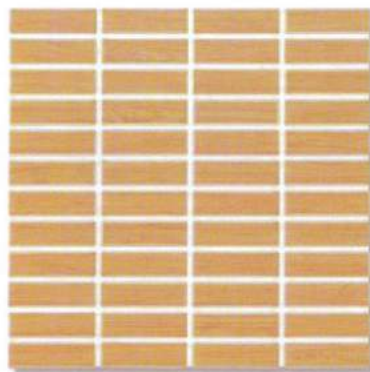


YCB062302

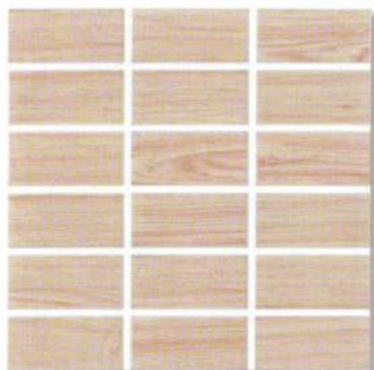

YCB062303

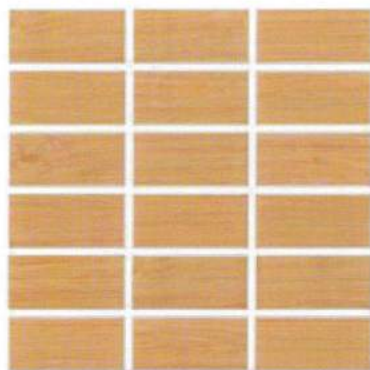

YCB062304

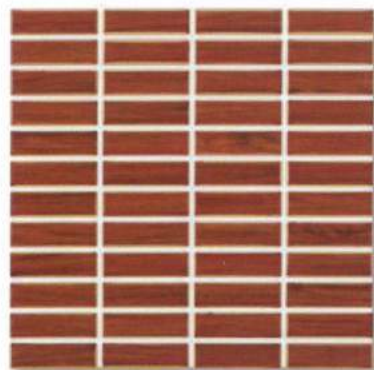

YCB062305



YCB062306




YCB062307



YCB062308


Chip Size(mm)	21.5x71.5
Sheet Size(mm)	294x298
Joint Width(mm)	3

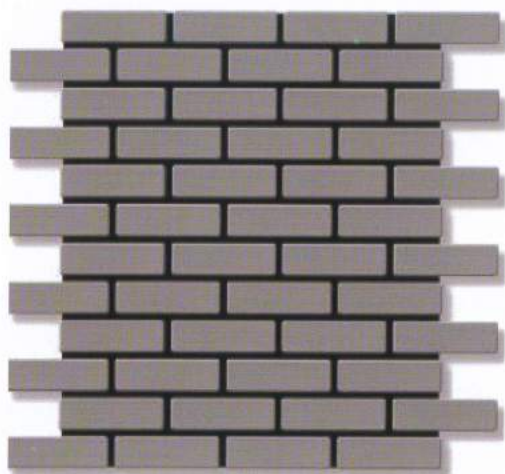


YCB062401




YCB062402

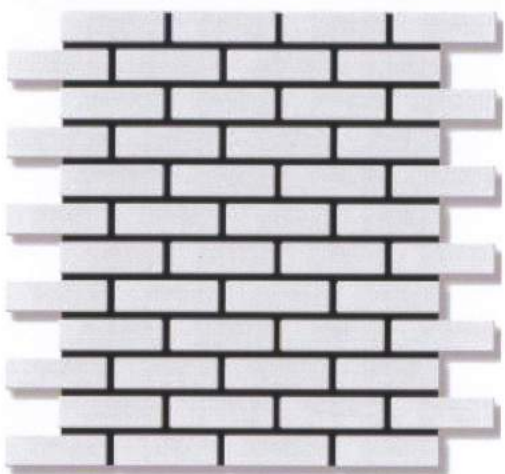


YCB062403

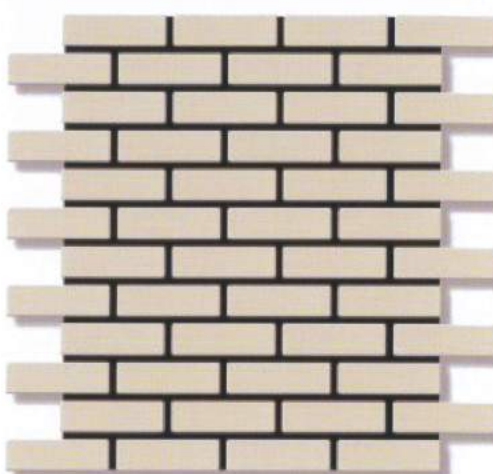

YCB062404

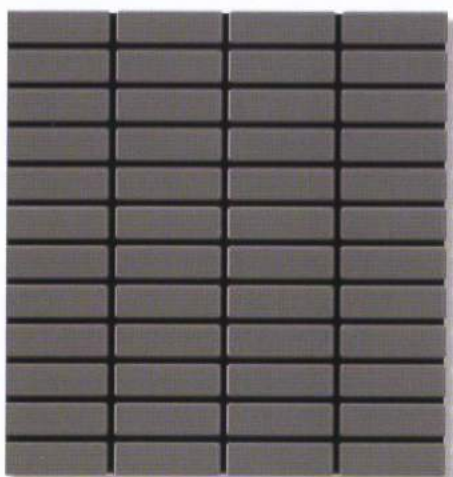


YCB062405

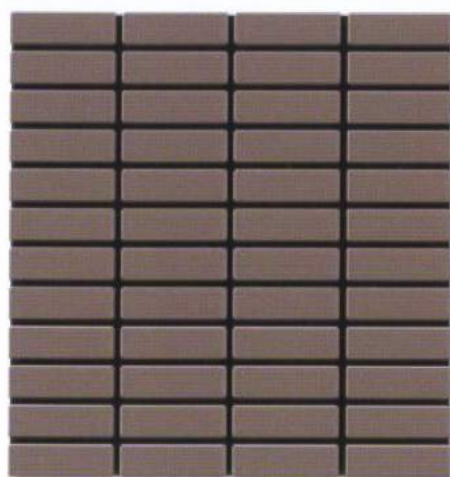

YCB062406




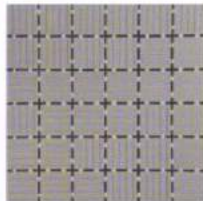


Ceramic Mosaic




Yekalon
TILE COLLECTION

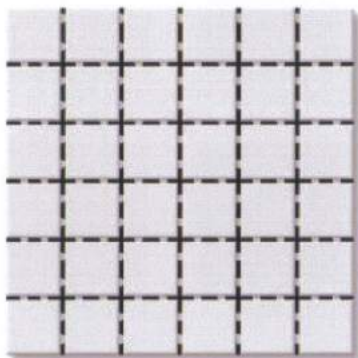


YCB062601

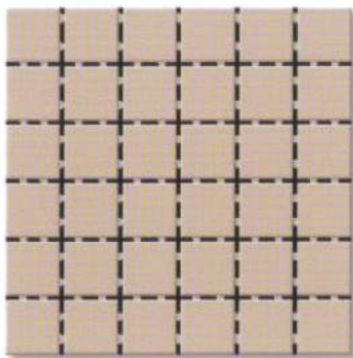


YCB062602

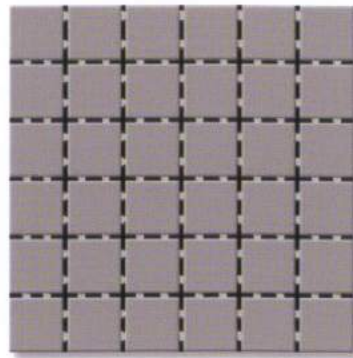


YCB062603

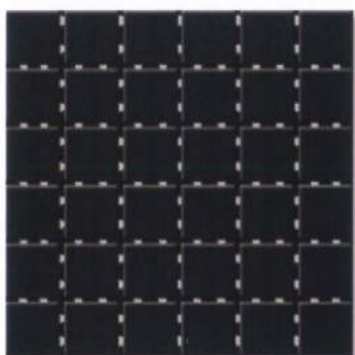


YCB0626004

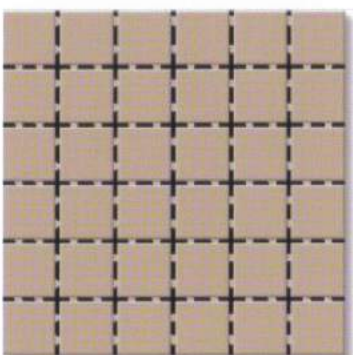


YCB062605

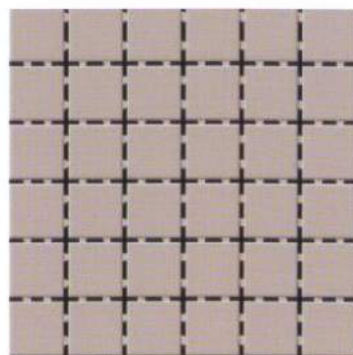

YCB062606

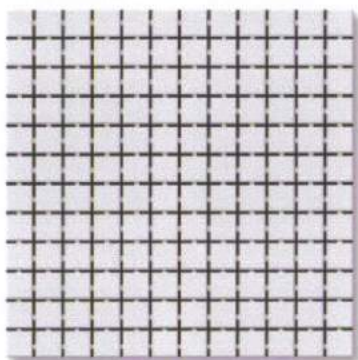

YCB062607

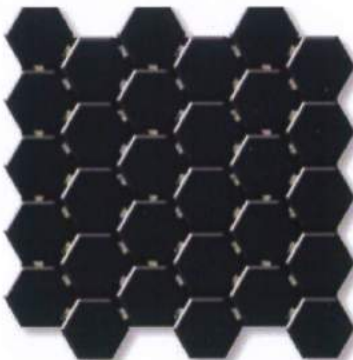

YCB062608

Malt Finish	 WB31000	 JHTWB30095	 WB30006	 WB11001	 WB81004	 WB60718
Glossy Finish	 WB32000	 JHTWB30105	 WB31008	 WB21005	 WB810103	 WB81008
Malt Finish	 WB20085	 WB21014	 WB21017	 WB21015	 WB61003	 WB21008
Malt Finish	 WB20047	 WB20028	 HWB40015	 HWB40085	 WB41007	 WB81010
Malt Finish	 WB31011	 WB51002	 WB20107	 WB21016	 WB820096	 WB30071
Glossy Finish	 WB4001	 WB71002	 WB20116	 WB21021	 WB21002	 WB31001
Malt Finish	 WB31010	 WB31012	 WB21007	 WB40053	 WB71021	 WB80021
Glossy Finish	 WB30091	 WB21010	 WB20073	 WB40067	 HWB80091	 WB81008



JWB30075



JWB60075



JWB30045



JWB30028



JWBR20115



JWB80085



JWB50035



JWB30073



JWB30027



JWB40027



JWBR30016



JWB10065



JWB40046



JWB60066



JWB60031



JWBP10016



JWBR30017



JWB10036



JWB70071



JWB80063



JWB80033



JWBP20031



JWBP40049



JWB10026



JWB41011



JWB30085



JWB20070



JWB50033



JWB20025



JWB80101



JWB10037



JWB30017



JWB40066



JWB60091



JWB40029



JWB80011



Crystal MOSAICS INSTALLATION

1.CHECKING THE MATERIAL

Before starting work, be careful to check the boxes containing the sheets of YEKALON mosaic and ensure that there is sufficient material to complete the job. Every box indicates the item number, shade number, production batch number, and other details.

2.SKIMMING

This is a step that serves to render the substrate for tiling perfectly smooth, uniform and white (a substrate showing differences in color will spoil the appearance of the finished mosaic).

3.STARTING LINES

Draw lines on the surface of the substrate to aid correct positioning of the sheets. Lay three sheets out the floor side by side, so that the gap between the sheets is the same as the gap between the single tessera, and measure the overall width. Transfer this measurement both horizontally and vertically to the surface being covered and, using a straightedge and a spirit level, mark out a grid, the area will now be divided into a number of squares, each corresponding to nine sheets of mosaic.

4.PREPARE THE ADHESIVE

Prepare the adhesive, and spread over an area no larger than will be occupied by the first nine sheets, using the trowel. First apply a thick coat with the smooth edge of the tool, drawing the teeth across evenly and "combing" the adhesive to produce a uniformly ridged bed. The sheets can now be positioned.

5.LAYING AND FIXING

The sheets are back-mounted to a mesh that should be directly applied to the bed of adhesive. On walls, the thicker strands of mesh should be positioned vertically, please note: the gap separating adjacent sheets must be the same as the gap between single tessera.

6.A FIRM BOND

With the sheets in place, tap the tessera home with a float so that the mesh beds firmly into the adhesive.

7.A PERFECT END RESULT

With all the sheets laid or fixed, and before the adhesive begins to set, the distance between tessera can be adjusted to ensure that all gaps are of uniform width. This is done by cutting through the mesh along the gap with a knife and edging the adjoining tessera marginally closer together or farther apart with the aid of a trowel. This is a step of the mosaic tiling procedure that calls for patience, but one that also adds considerable value to the finished job.

8.GROUTING

Make sure to use all of the grout. Using the small trowel, scoop the grout a little at a time, onto the float and begin applying to the mosaic. Move the tool diagonally across the tessera, first from the bottom up and then squeegee downwards in the opposite direction, making certain that all of the joints are completely filled and that no excess remains.


9.CLEANING

Before the grout hardens, begin cleaning off the surface. Prepare two buckets of this solution: immerse the pad in the first, and without wringing, swab the surface of the mosaic repeatedly with a circular motion. Next, immerse the sponge in the second clean water to remove any smears, leaving the mosaic sparklingly clean.


10. Notes:

(1) Please use tile adhesive in paving crystal glass mosaic; if no tile adhesive available locally and have to use grout, do not use white grout.


(2) Crystal glass mosaic is not applicable to floor use.

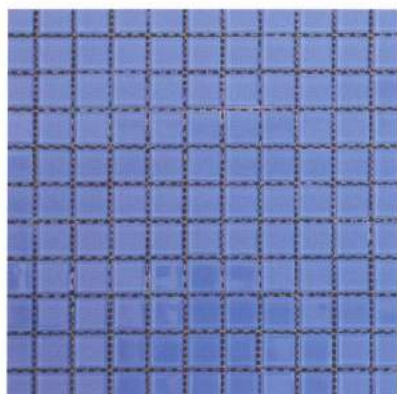


YRB040501

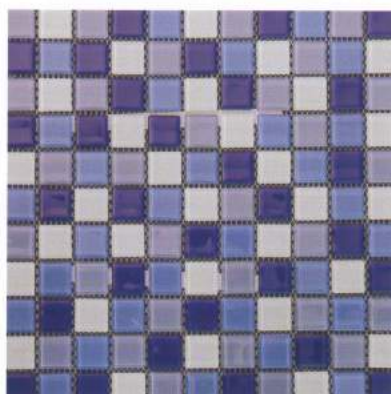


YRB040502

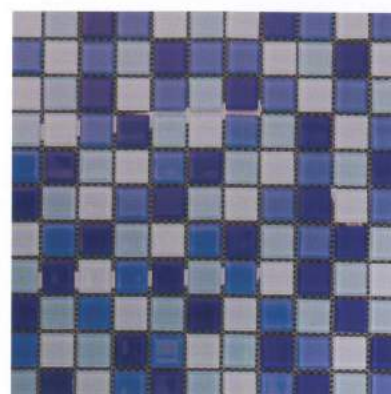


YRB040503

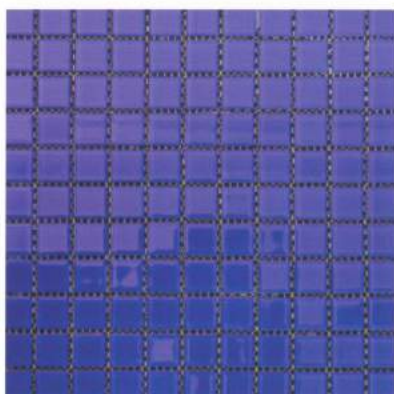

YRB040504

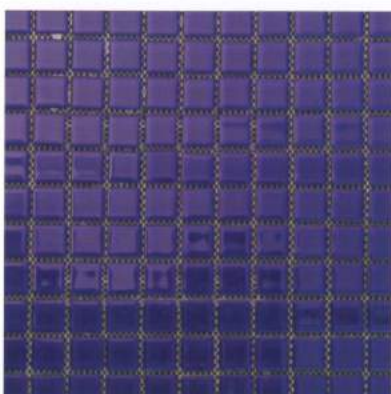

YRB040505

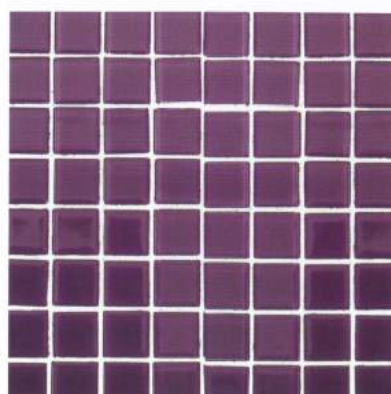


YRB040506




YRB040507




YRB040508

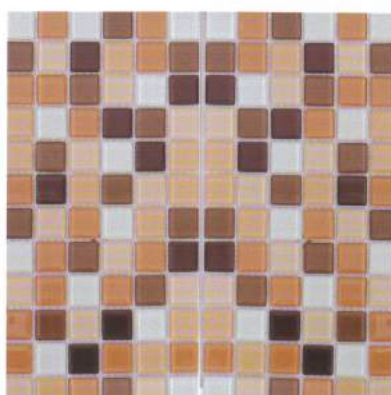

YRB040509

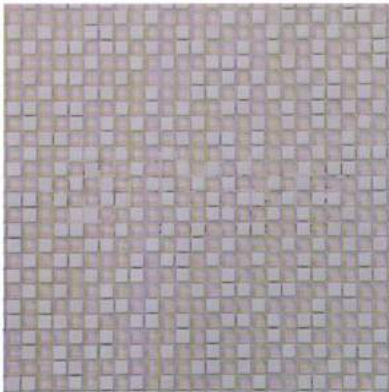

YMB040101

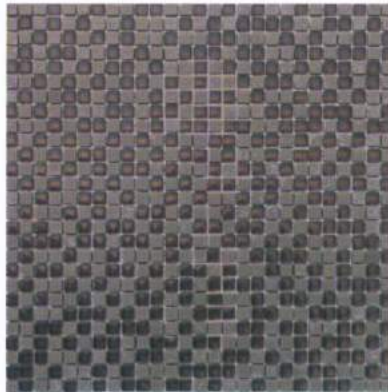


YMB040102



YMB040103



YMB080104

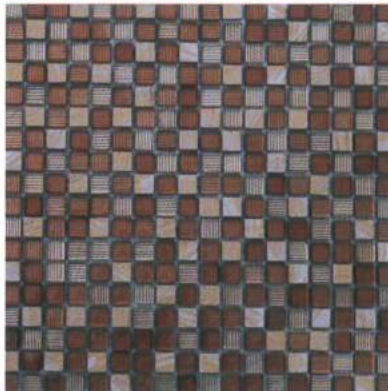


YMB080105



YMB080106



YMB080107

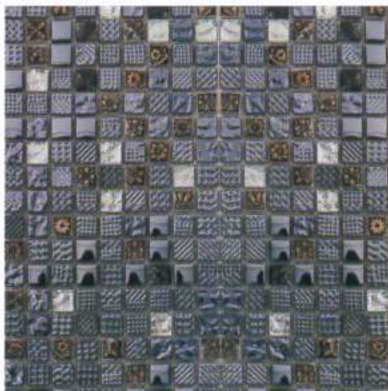

YMB080108



YMB080109





YMW040301




YMW040302



YMW040303



YMW040304

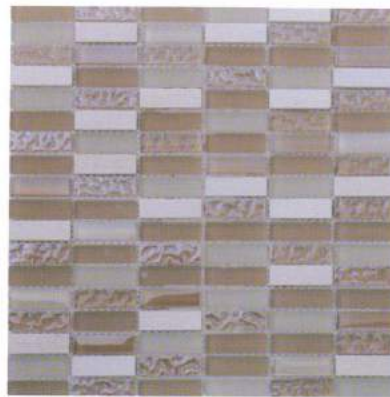

YMW080306




YMW080307



YMW040309



YMW080310

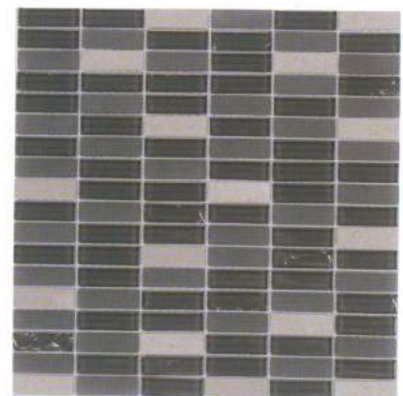

YMW080311





YMW080501



YMW080502



YMW060503



YMW080504



YMW080505




YMW080506



YMW080507



YMW080509

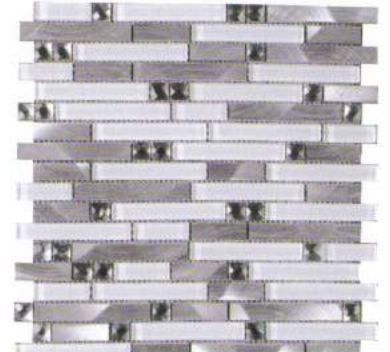

YMW080510





YMW080701



YMW080702



YMW080703



YMW080704





YMWO80901




YMWO80904



YMWO80905



YMWO80908

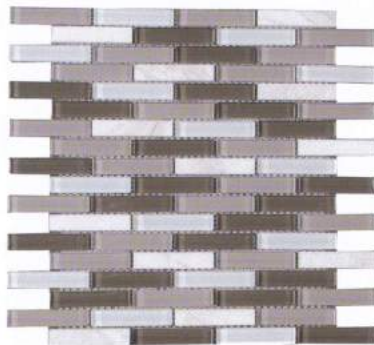


YMWO80909



YMWO80910



YMWO80911

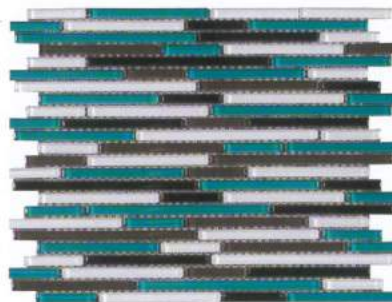

YMWO80912



YMWO80913






YMW081301



YMW081302

\$28.31sqm

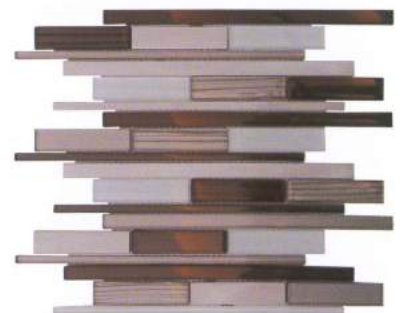

YMW081303



YMW081304



YMW081305




YMW081306



YMW081307



YMW081308

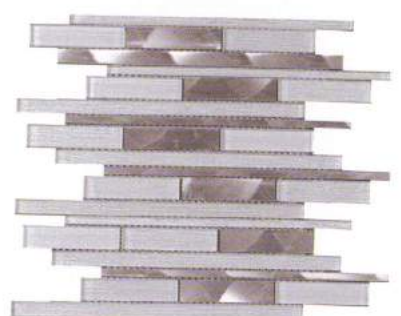

YMW081309





YMW081501



YMW081502



YMW081503




YMW081504




YMW081505



YMW081507

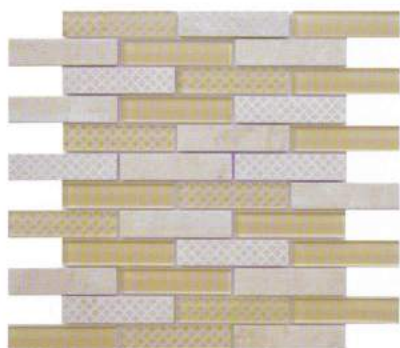

YMW081601

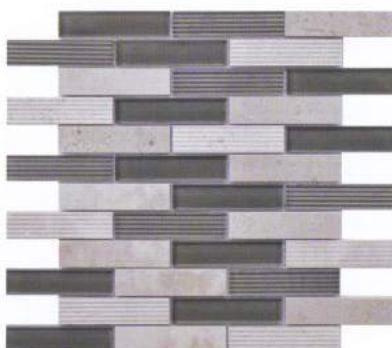

YMW081602



YMW081603



YMW081604



YMW081605



YMW081606



YMW081607



YMW081608



YMW081609



YMW081707



YMW081711



YMW081712




YMW081708




YMW081709




YMW081710

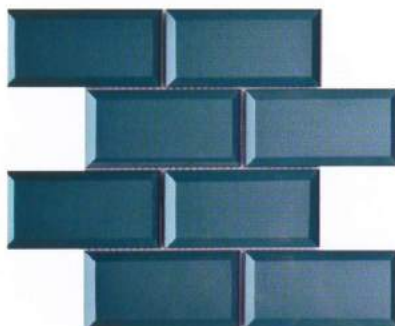


YMWO81801

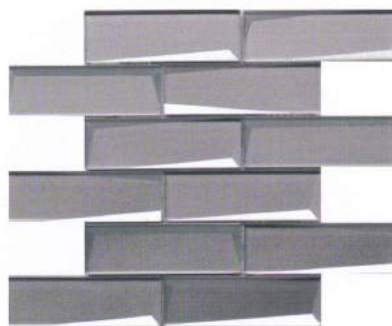


YMWO81802

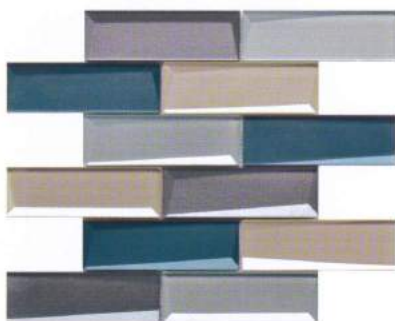


YMWO81803

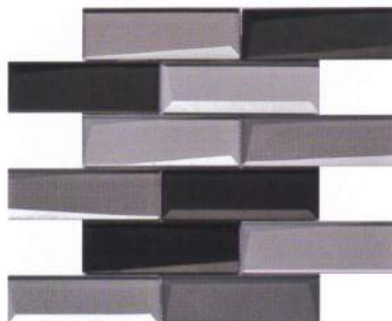

YMWO81804

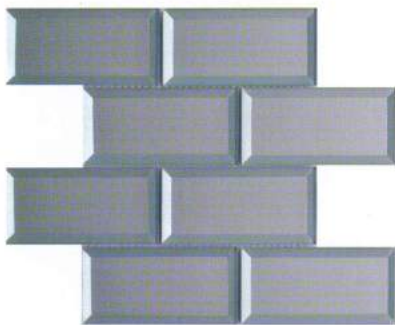


YMWO81805

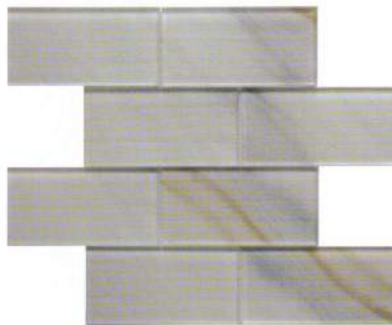


YMWO81806




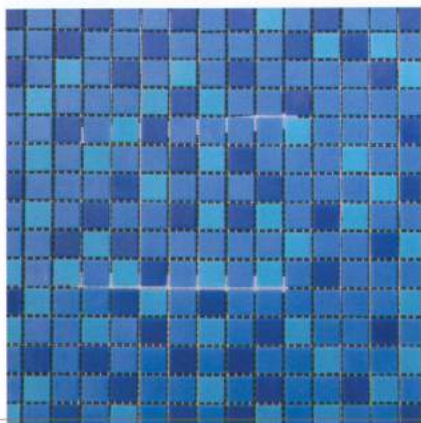



YGB040301

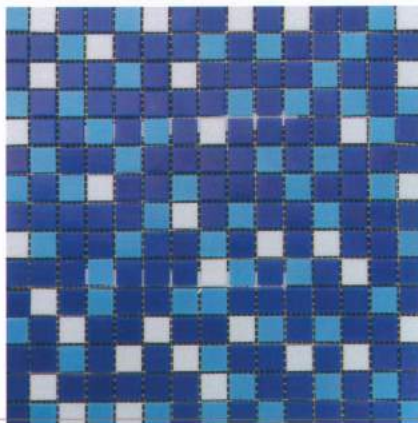


YGB040302

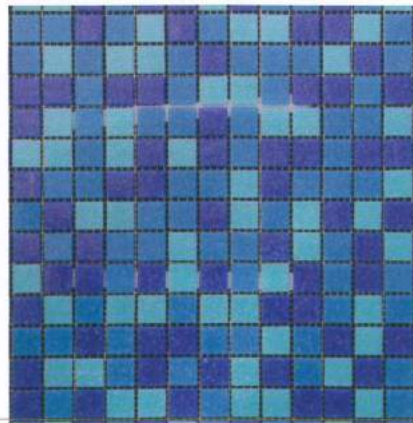


YGB040303

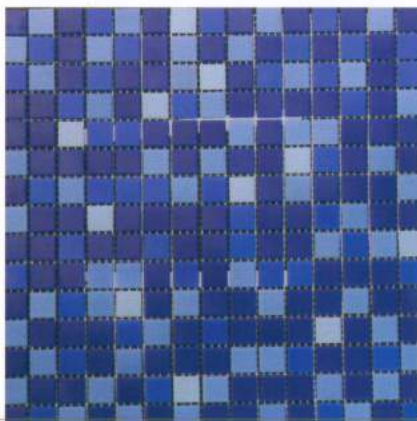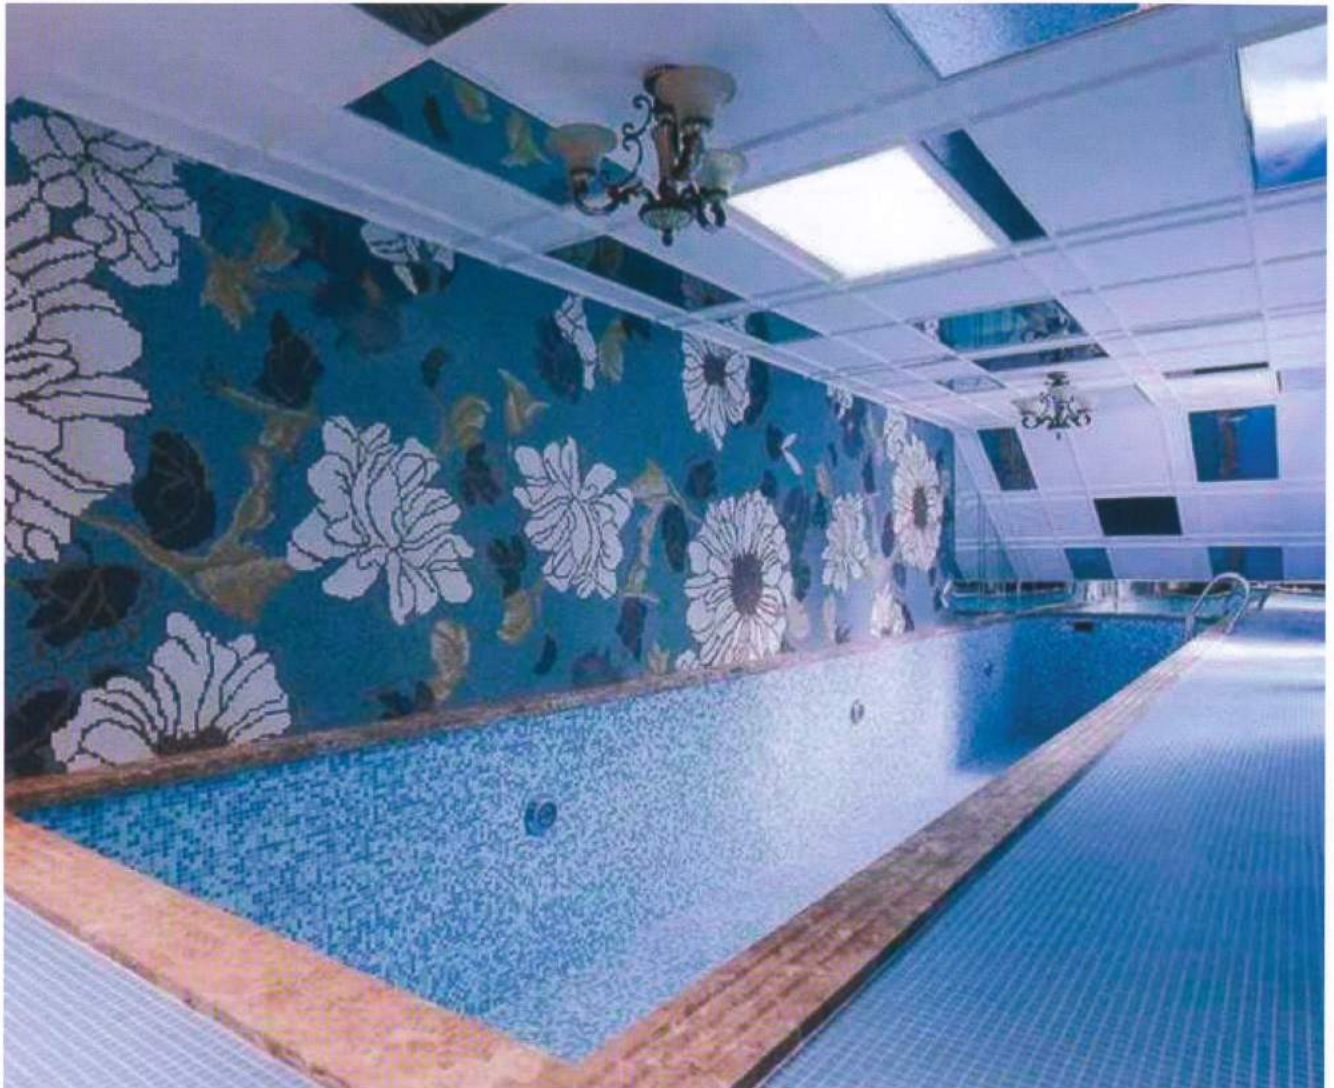

YGB040401

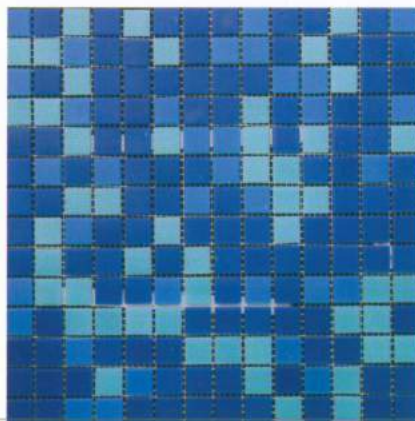


YGB040402

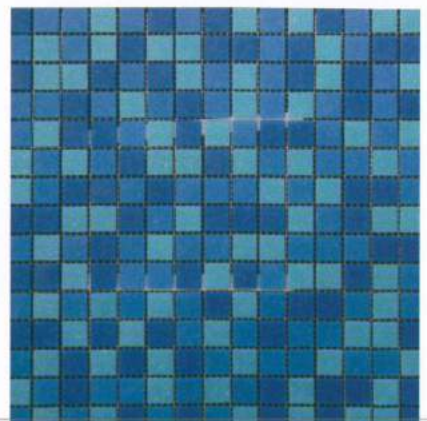


YGB040403




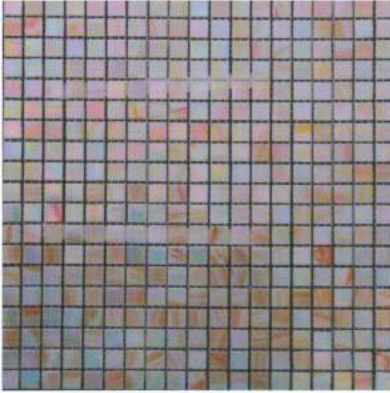


YGB040601

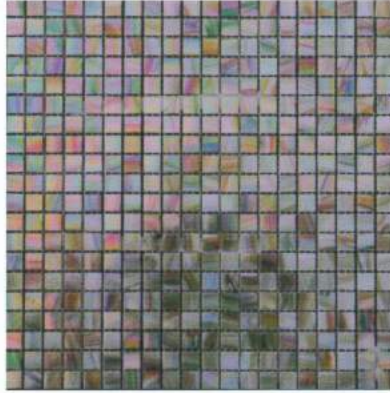


YGB040602

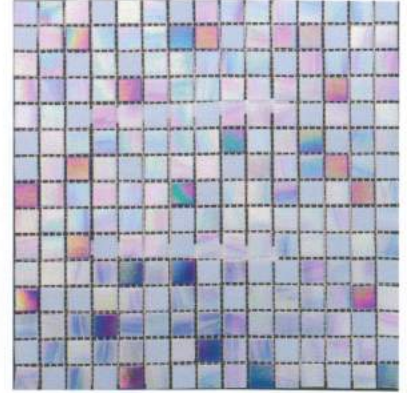


YGB040603

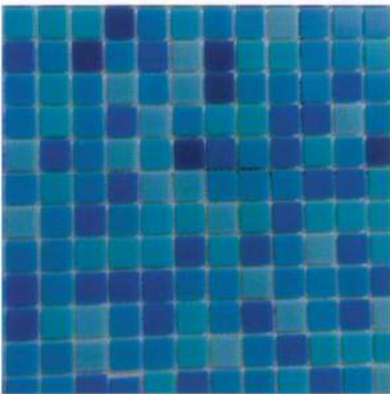


YGB040604

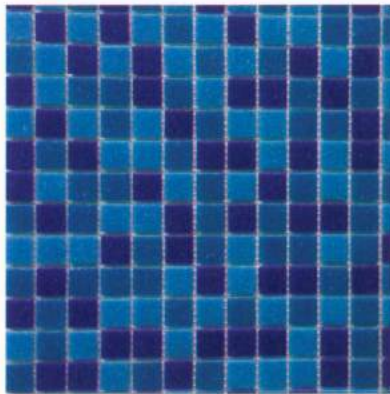


YGB040605

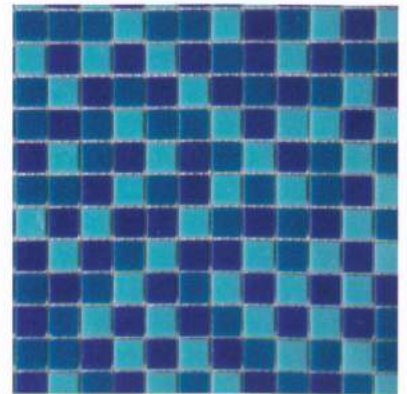

YGB040606

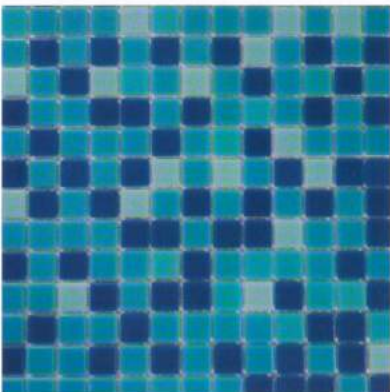


YGB040607

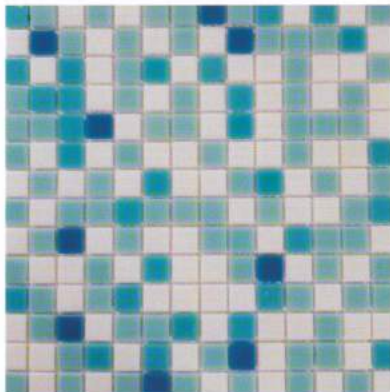


YGB040608




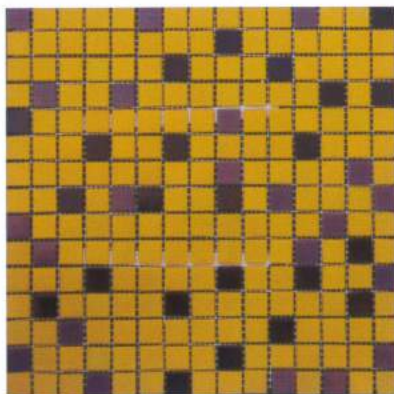


YGB040801

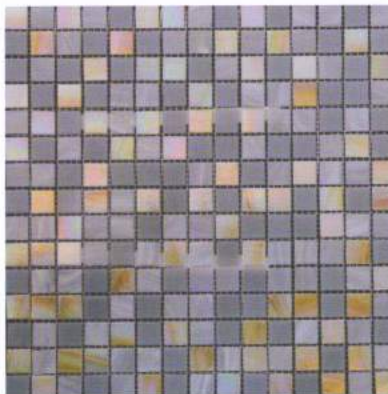


YGB040802

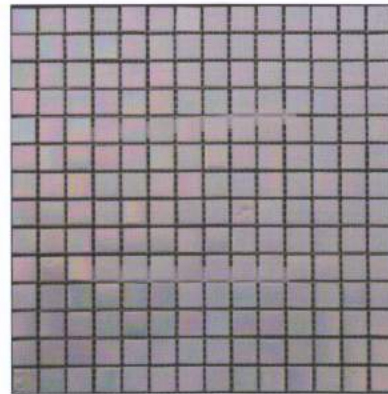


YGB040803

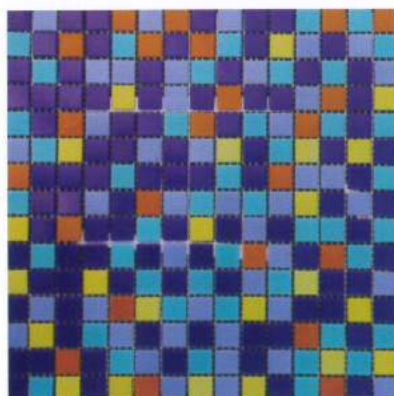


YGB040804

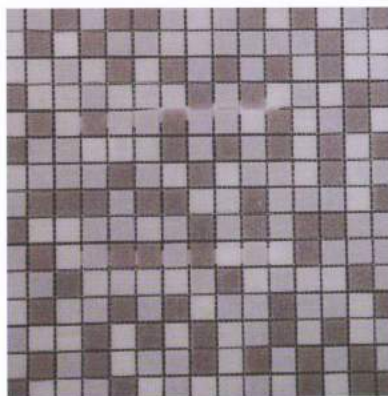

YGB040805

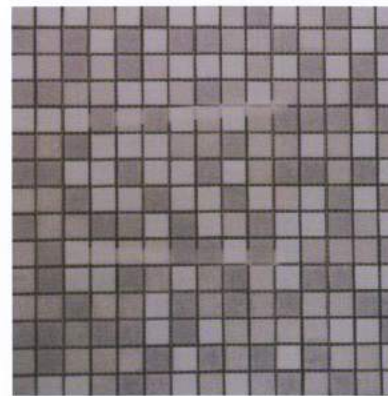

YGB040806

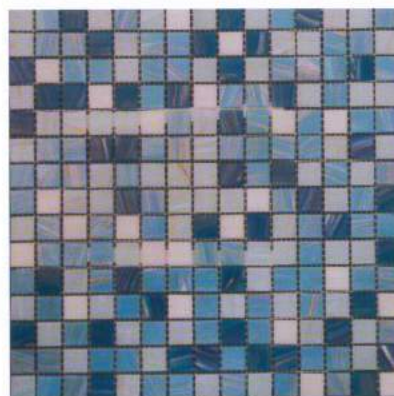


YGB040807




YGB040808




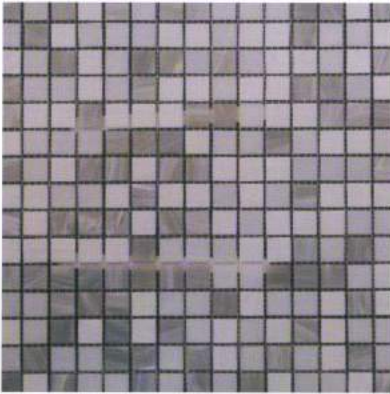

YGB041001

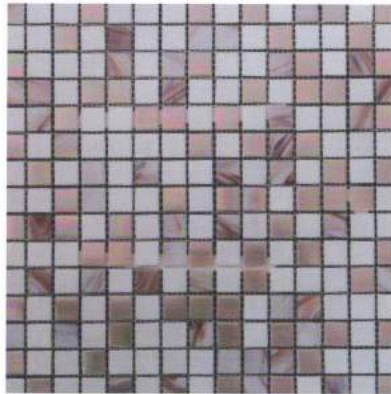


YGB041002

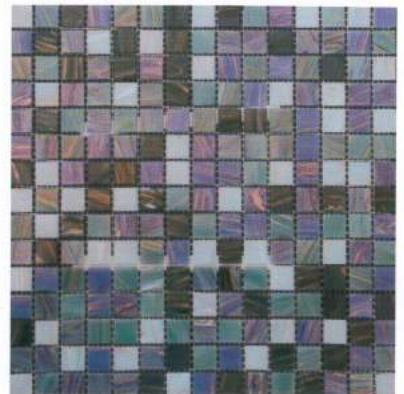

YGB041003




YGB041004

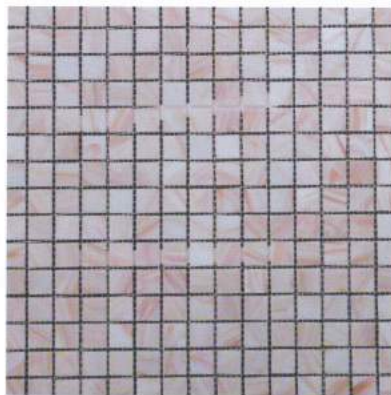

YGB041005




YGB041006

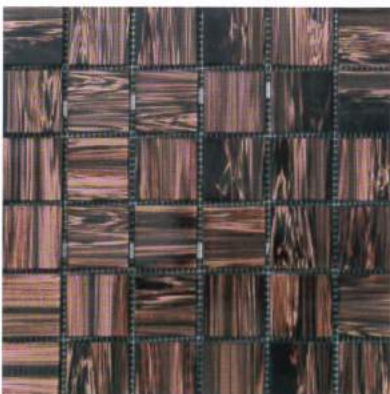

YGB041007



YGB061008

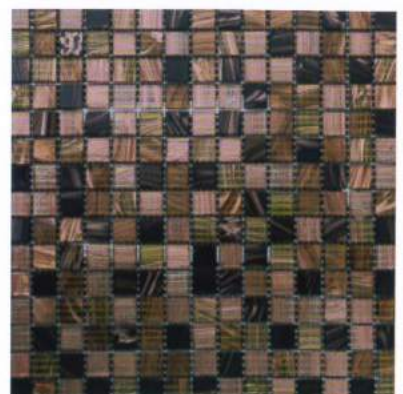

YGB041009







25V1



25V2



25V4



25V3



25V36



25V10



25V11




25V12



25V15



25V16

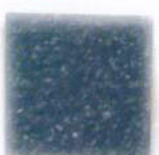

25V20



25V21



25V25



25V31



30V1




30V2



30V4



30V3

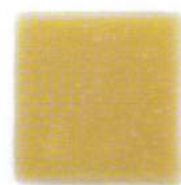

30V8




25V10




30V11




30V12

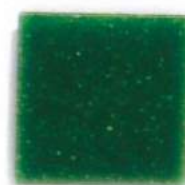

30V15

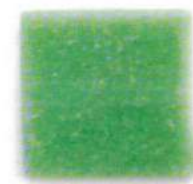

30V16

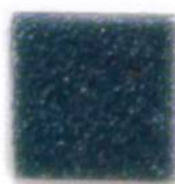


30V20



30V21




30V25

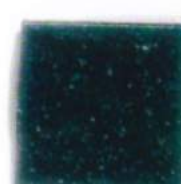


30V31



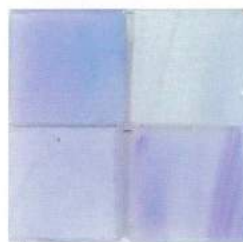

F751(8)

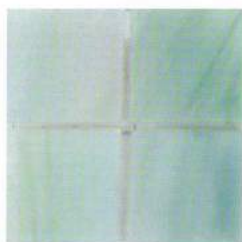

F651(8)



F451(8)



F351(8)



F851(8)



F130(6)



F131(6)



F731(6)



F733(7)



F751(7)



F735(7)




F434(6)



F331(6)



F333(6)



F335(6)



F991(19)



F931(12)



F952(12)




F831(6)



E801(13)



E503(15)

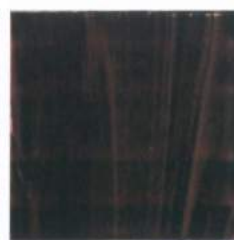

F871(8) F373(8) F872(8) F374(8) F171(8)



F772(8) F773(8) F973(8) F972(8) F971(8)



A52(2)



A53(2)




A54(2)



A12(1)



A11(1)

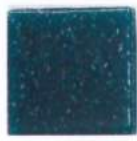

A78(2)




A77(2+)



A76(2)



A176(2)

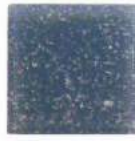

A72(2)



A73(1)



A74(1)



A75(1)



A36(2)



A33(2)



A133(1)



A34(1)



A35(1)



A62(2)



A63(2)



A65(2)



A30(2+)



A31(2)



A32(2)



A321(2+)



A322(2+)



A323(2+)



A325(1)



A64(1)



A55(2)



A56(1)



A57(1)



A58(1)



A81(2+)



A82(2+)



A83(2+)



A19(1)



A28(2)



A27(1)



A20(1)



A21(1)



A23(1)




A25(1)



A26(2)



20WS-1

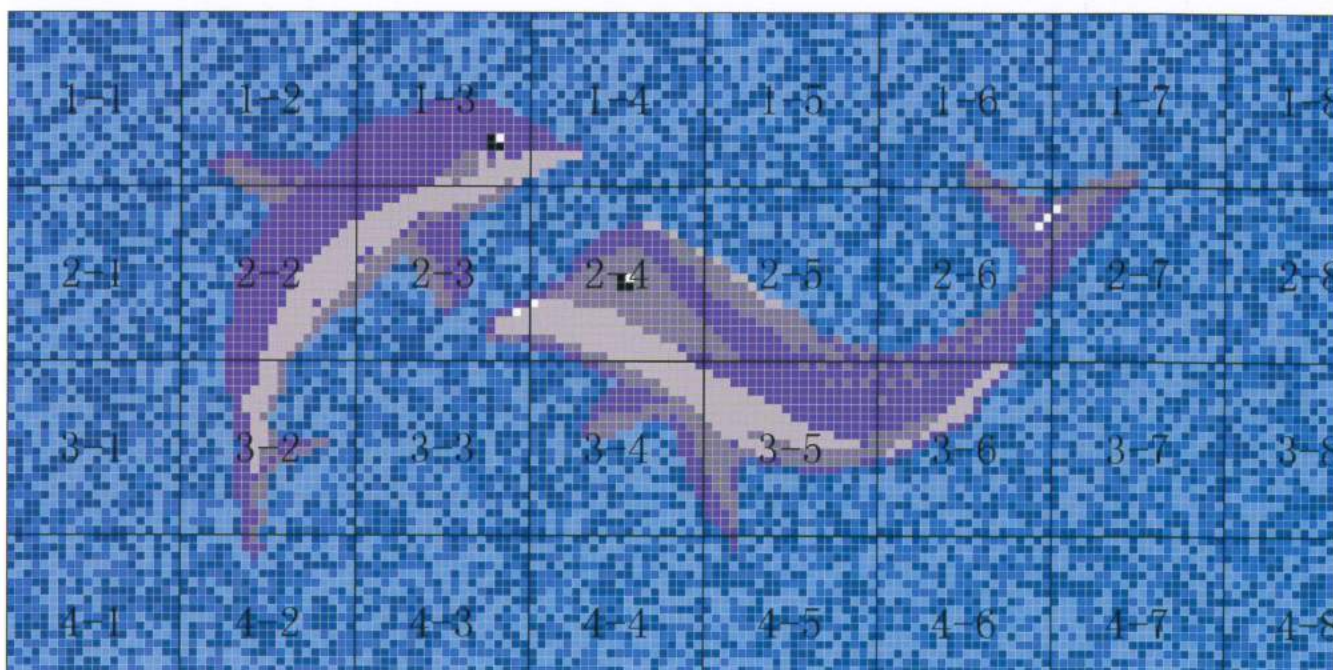

15WS-2




20YS-1



JH1627



JH18233

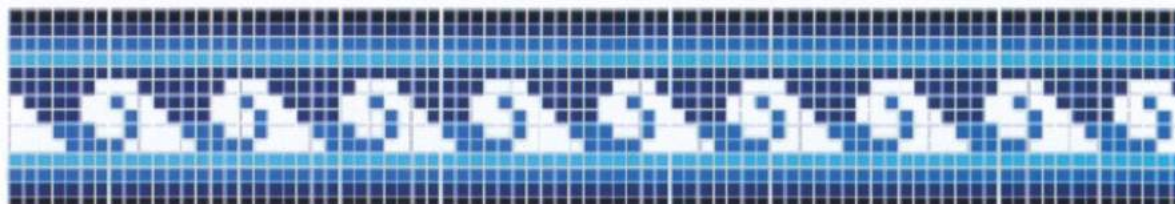

AL 1001

SIZE:135x1000mm 10x10mm




U-37

SIZE:170x1000mm 20x20mm



U-41

SIZE:218x1000mm 20x20mm

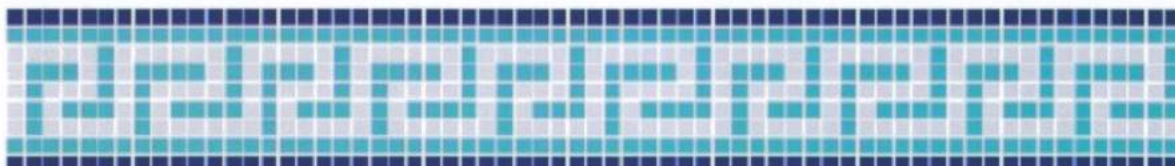

U-63

SIZE:196x1000mm 20x20mm



U-64

SIZE:125x1000mm 20x20mm




U-65

SIZE:105x1000mm 20x20mm



U-66

SIZE:87x1000mm 20x20mm

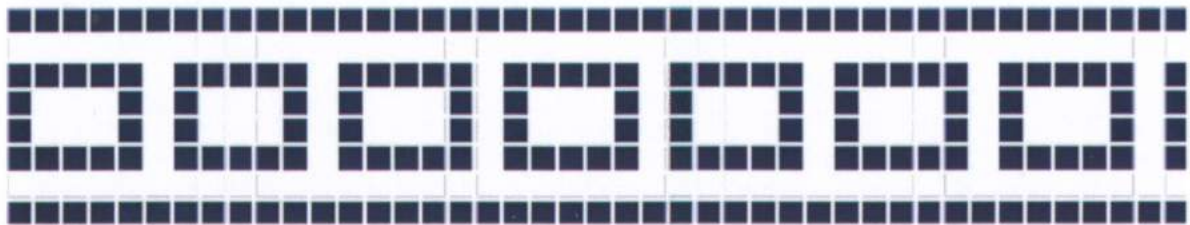

U-67

SIZE:174x1000mm 20x20mm




U-68

SIZE:130x1000mm 20x20mm



U-69

SIZE:130x1000mm 20x20mm

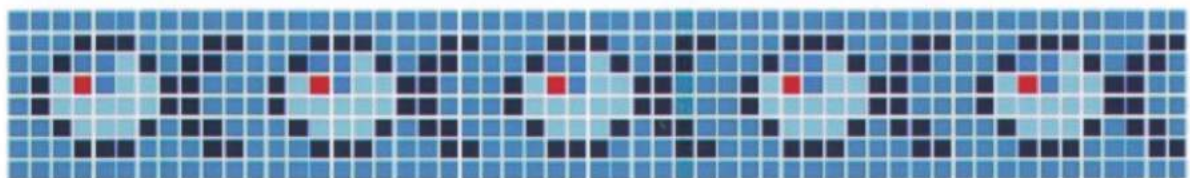

U-70

SIZE:174x1000mm 20x20mm



U-71

SIZE:174x1000mm 20x20mm

NOTE : All colours shown in this brochure are as close to the actual product colours as modern technical printing process allows.it is necessary to refer to the actual product colours



Tel:0086-755-25160926/21527355 Fax: 0086 755 25419568

Email: webmaster@yekalon.com Website: www.yekalon.com

Add.: 3rd Floor, Jinxiu Bldg, Wenjin Middle Road, Luohu District, Shenzhen, 518003, P.R. China (Before June 2018)
3rd Floor, Building C, Golden Apple Innovation Park, Ganli 2nd Road, Longgang District, Shenzhen,
518112, P.R. China (After June 2018)